

KENWOOD

AUDIO VIDEO SURROUND RECEIVER

KRF-V6050D KRF-V5050D

INSTRUCTION MANUAL

KENWOOD CORPORATION

This instruction manual is used to describe multiple models listed above. Model availability and features (functions) may differ depending on the country and sales area.

About the supplied remote control

Compared to standard remote controls, the remote control supplied with this receiver has several operation modes. These modes enable the remote control to control other audio/video components. In order to effectively use the remote control it is important to read the operating instructions and obtain a proper understanding of the remote control and how to switch its operation modes (etc.). Using the remote control without completely understanding its design and how to switch the operation modes may result in incorrect operations.

Preparations

Operations

Remote Control

Additional Information

Before applying the power

Caution : Read this page carefully to ensure safe operation.

- 2** Units are designed for operation as follows.
- Europe and U.K. AC 230 V only
 - Other countries AC 110-120 / 220 - 240 V

Unpacking

Unpack the unit carefully and make sure that all accessories are put aside so they will not be lost.

Examine the unit for any possibility of shipping damage. If your unit is damaged or fails to operate, notify your dealer immediately. If your unit was shipped to you directly, notify the shipping company without delay. Only the consignee (the person or company receiving the unit) can file a claim against the carrier for shipping damage.

We recommend that you retain the original carton and packing materials for use should you transport or ship the unit in the future.


Keep this manual handy for future reference.

Accessories

FM indoor antenna (1)




AM loop antenna (1)

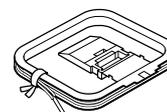

For KRF-V6050D

Remote control unit (1)
RC-R0616

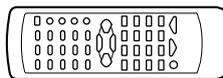


Batteries (R6/AA) (2)



For KRF-V5050D

Remote control unit (1)
RC-R0512

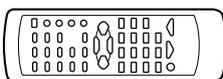

Batteries (R6/AA) (2)



Safety precautions

WARNING :

TO PREVENT FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



THE LIGHTNING FLASH WITH ARROWHEAD SYMBOL, WITHIN AN EQUILATERAL TRIANGLE, IS INTENDED TO ALERT THE USER TO THE PRESENCE OF UNINSULATED "DANGEROUS VOLTAGE" WITHIN THE PRODUCT'S ENCLOSURE THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS.



THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE LITERATURE ACCOMPANYING THE APPLIANCE.

Microcomputer malfunction

If operation is not possible or an erroneous display appears, even though all connections have been made properly, reset the microcomputer referring to "In case of difficulty".

→ 38

Maintenance of the unit

When the front panel or case becomes dirty, wipe with a soft, dry cloth. Do not use thinner, benzine, alcohol, etc. for these agents may cause discoloration.

In regard to contact cleaner

Do not use contact cleaners because it could cause a malfunction. Be specially careful not to use contact cleaners containing oil, for they may deform the plastic component.

Contents

Caution : Read the pages marked  carefully to ensure safe operation.

Preparations

-  **Before applying the power** 2
-  Safety precautions 2
- Unpacking 2
- How to use this manual 4
- Special features 4
- Names and functions of parts** 5
- Remote control unit (RC-R0616) (KRF-V6050D) 6
- Remote control unit (RC-R0512) (KRF-V5050D) 7
- Setting up the system** 8
- Connecting audio components 9
- Connecting video components 10
- Connecting a DVD player (6 channel input) 11
- Digital connections 12
- Connecting to the AV AUX jacks (KRF-V6050D only) 13
- Connecting the antennas 13
- Connecting the system control 14
- Connecting the speakers 15
- Preparing the remote control 17
- Preparing for surround sound** 18
- Speaker settings 18

Remote Control

- Basic remote control operations for other components (For KRF-V6050D)** 32
- Registering setup codes for other components 32
- Operating other components 32
- Setup code chart (KRF-V6050D) (For RC-R0616) 33
- DVD player operations (For KRF-V5050D) 34
- Cassette deck, CD player & MD recorder operations (For KRF-V5050D) 35
- Cassette deck, CD player & MD recorder operations (For KRF-V6050D) 36
- Other components' operations (For KRF-V6050D) 37

Additional Information

-  **In case of difficulty** 38
-  **Specifications** 40

Operations

- Normal playback** 19
- Preparing for playback 19
- Listening to a source component 20
- Adjusting the sound 20
- Recording** 21
- Recording audio (analog sources) 21
- Recording video 22
- Recording audio (digital sources) 22
- Listening to radio broadcasts** 23
- Tuning (non-RDS) radio stations 23
- Using RDS (Radio Data System) 23
- Using the RDS DISP. (Display) key 24
- Presetting RDS stations (RDS AUTO MEMORY) 24
- Presetting radio stations manually 25
- Receiving preset stations 25
- Receiving preset stations in order (P.CALL) 25
- Tuning by program type (PTY search) 26
- Ambience effects** 27
- Surround modes 27
- Surround play 29
- DVD 6-channel playback 30
- Convenient functions 30

How to use this manual

The manual covers the KRF-V6050D and KRF-V5050D. Items such as functions, number of jacks, and remote control details differ somewhat between these models. To confirm the functions available on the model you have purchased, refer to the table below.

Model name	Remote Control	Terminal	
		Speaker out	Front input
KRF-V6050D	RC-R0616	2 systems (A, B)	Equipped
KRF-V5050D	RC-R0512	1 system	Not equipped

This manual is divided into four sections, Preparations, Operations, Remote Control, and Additional Information.

Preparations

Shows you how to connect your audio and video components to the receiver and prepare the surround processor.

We will guide you to make setting up your system as easy as possible. However, since this receiver works with all of your audio and video components, connecting the system can be fairly complex.

Operations

Shows you how to operate the various functions available from the receiver.

Remote Control (KRF-V6050D only)

Shows you how to operate other components using the remote control, as well as a detailed explanation of all remote control operations. Once you have registered your components with the proper setup codes, you'll be able to operate both this receiver and your other AV components (TV, VCR, DVD player, CD player, etc.) using the remote control supplied with this receiver.

Additional Information

Shows you additional information such as "In case of difficulty" (trouble-shooting) and "Specifications".

Memory back up function

Please note that the following items will be deleted from the unit's memory if the power cord is disconnected from the AC outlet for approximately 2 days.


- Power mode.
- Input selector settings.
- Device preset.
- Picture output.
- Speaker ON/OFF
- Volume level.
- BASS, TREBLE, INPUT level.
- Subwoofer ON/OFF.
- Dimmer level.
- Monitor ON/OFF.
- MD/TAPE settings.
- 6ch/2ch input setting.
- Listen mode setting.
- Speaker settings.
- Input mode setting.
- Midnight mode setting.
- Broadcast band.
- Frequency setting.
- Preset stations.
- Tuning mode.
- CINEMA EQ.
- Source Direct.

Special features

True home theater sound

This receiver incorporates a wide variety of surround modes to bring you maximum enjoyment from your video software. Select a surround mode according to your equipment or the software you are going to play and enjoy! → 27

Dolby Pro Logic & Dolby 3 Stereo

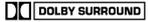This surround system reproduces theater-like surround sound from video software marked . The PRO LOGIC mode uses the built-in adaptive matrix circuit to steer the Left, Center, Right and Surround channel audio signals. The 3 STEREO mode will redirect the Surround signal to the front left and right speakers when only the front and center speakers are used.

Dolby Digital

The DOLBY DIGITAL mode lets you enjoy full digital surround from software processed in the Dolby Digital format. Dolby Digital provides up to 5.1 channels of independent digital audio for better sound quality and more powerful presence than conventional Dolby Surround.

DTS

DTS (Digital Theater System) is a 5.1 channel digital audio format that provides five full-spectrum channels and one low-frequency (subwoofer) channel for unprecedented clarity, optimum channel separation and a (wide) dynamic range.

In the DTS mode, the 5.1 channel digital input from a DTS CD, LD or DVD disc (carrying the "DTS" marking) can be played in Digital Surround.

Important:

When a DTS disc is played on a CD, LD or DVD player, noise may be output from the analog output. It is recommended that you connect the digital output of the player to the digital input of this unit.

DSP surround modes

The DSP (Digital Signal Processor) used for this receiver incorporates a variety of high quality adjustable sound fields, like "ARENA", "JAZZ CLUB", "THEATER", "STADIUM" and "DISCO". It is compatible with almost any kind of program source.

DVD 6-channel input

If you own a DVD player equipped with 6-channel output, this receiver allows you to obtain the full surround sound impact of DVD source material featuring multi-channel encoding. Since the source signals are digital and each channel is input independently, the resulting ambience is far superior to what can be achieved with conventional surround sound systems.

Universal IR (InfraRed) remote control (KRF-V6050D only)

In addition to the basic receiver, the remote control supplied with this receiver can also operate almost all of your remote controllable audio and video components. Just follow the simple setup procedure to register the components you have connected.


RDS (Radio Data System) tuner

The receiver is equipped with an RDS tuner that provides several convenient tuning functions: RDS Auto Memory, to automatically preset up to 40 RDS stations broadcasting different programs; station name display, to show you the name of the current broadcast station; and PTY search to let you tune stations by program type.

PTY (Program TYPe) search

Tune the stations by specifying the type of program you want to hear.

Names and functions of parts

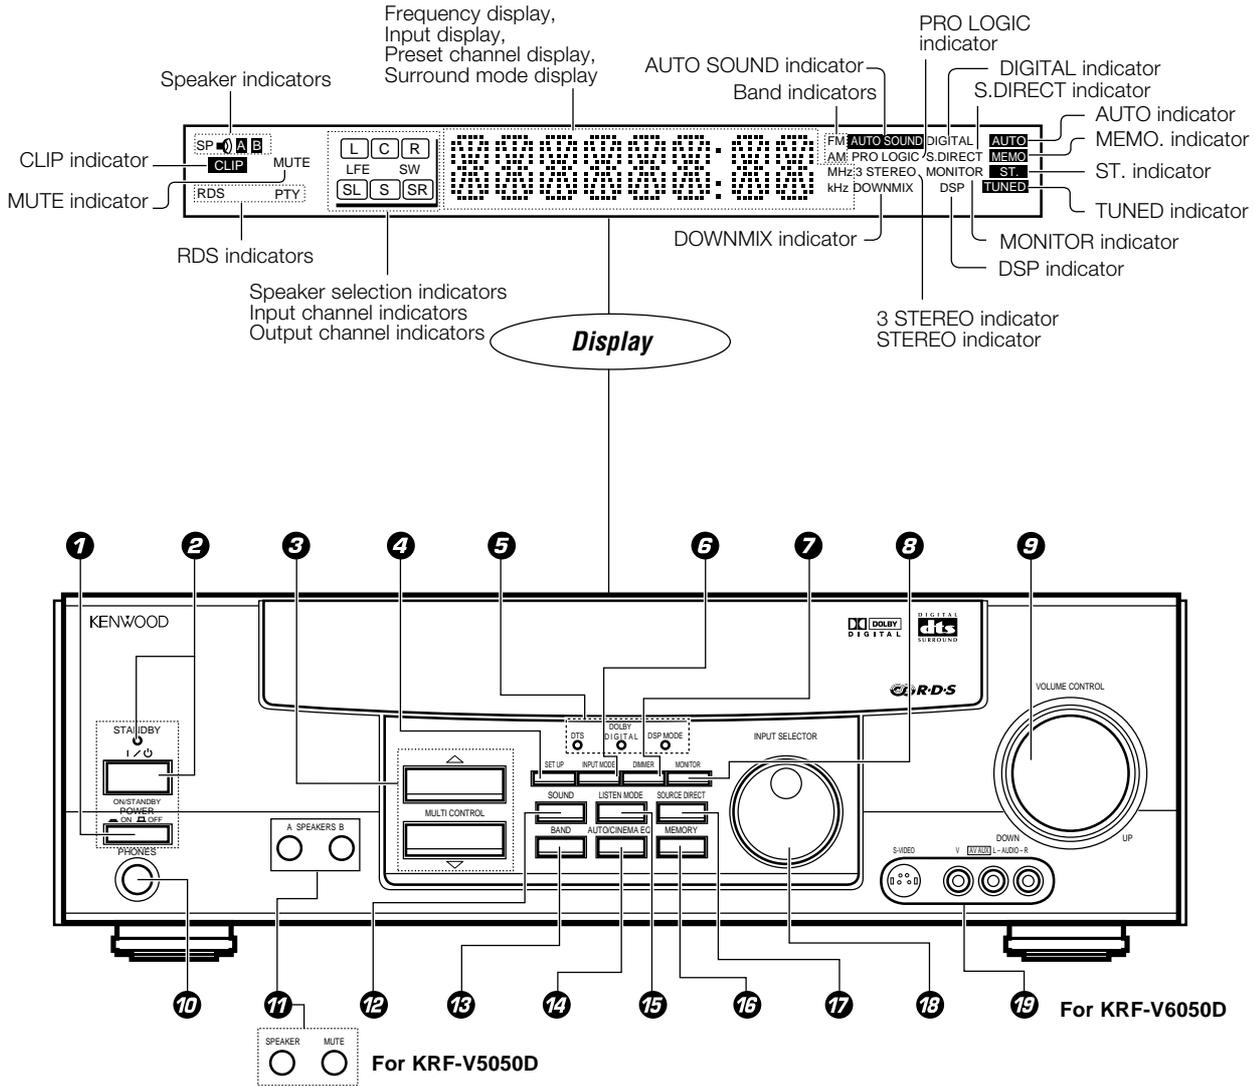


- 1 POWER key** - 18
Use to switch the main power ON/OFF.
- 2 ON/STANDBY (I/O) key** - 18
Use to switch the power ON/STANDBY when the POWER is turned ON.
STANDBY indicator
- 3 MULTI CONTROL keys** - 18
Use to control a variety of settings.
- 4 SET UP key** - 18
Use to select the speakers' settings etc.
- 5 Surround indicators**
DTS indicator - 29
Lights when the receiver is in the DTS mode.
DOLBY DIGITAL indicator - 29
Lights when the receiver is in the Dolby Digital mode.
DSP MODE indicator
Lights when the receiver is in the DSP mode.
- 6 INPUT MODE key** - 8
Use to switch between the digital and analog inputs.
- 7 DIMMER key** - 22 - 31
Use to adjust the brightness of the display.
Use to select the REC MODE.
- 8 MONITOR key** - 21
Use to monitor the source that is connected to the VIDEO2/MONITOR jack.
- 9 VOLUME CONTROL knob** - 20
- 10 PHONES jack** - 21
Use for headphone listening.
- 11 SPEAKERS A/B keys (For KRF-V6050D)** - 20
Use to turn the A/B speakers ON/OFF.
- 12 SPEAKER key (For KRF-V5050D)** - 20
Use to turn the speakers ON/OFF.
MUTE key (For KRF-V5050D) - 21
Use to temporarily mute the sound.
- 13 SOUND key** - 30
Use to adjust the sound quality and ambience effects.
- 14 BAND key** - 23
Use to select the broadcast band.
- 15 AUTO/CINEMA EQ. key** - 23
Use to select the auto tuning mode.
Use to switch the status of CINEMA EQ.
- 16 LISTEN MODE key** - 29
Use to select the listening mode.
- 17 MEMORY key** - 25
Use to store radio stations in the preset memory.
- 18 SOURCE DIRECT key** - 21
Use to pass the source material direct to the amplifier.
- 19 INPUT SELECTOR knob** - 20
Use to select the input sources.
- AV AUX (S VIDEO, V, AUDIO L/R) jack (For KRF-V6050D)** - 13

Standby mode

When standby indicator is lit, this receiver is in standby mode and consumes a small amount of current for back-up. This system can be switched on using remote control.

Remote control unit (RC-R0616) (KRF-V6050D)


This remote control unit can be used not only for Kenwood products but also for other non-Kenwood products by setting the appropriate maker setup codes. → 33

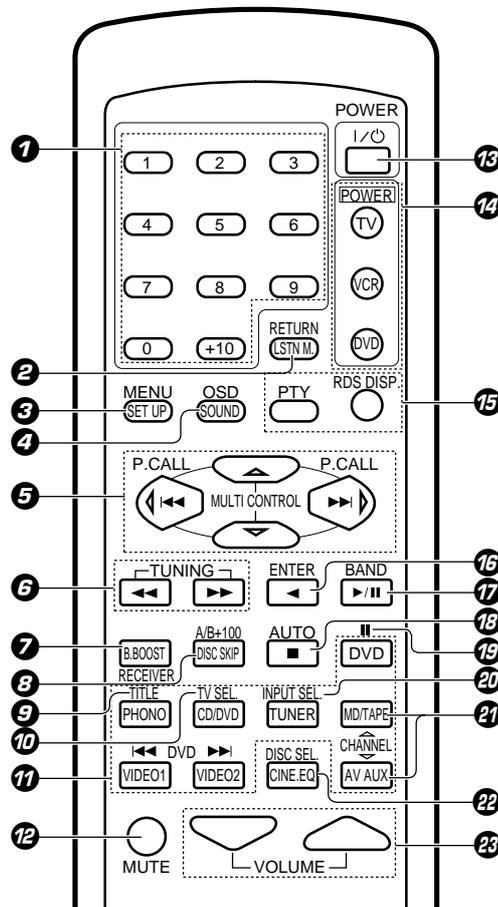

If the name of a function is different on the receiver and on the remote control, the name of the remote control key in this manual is indicated in parentheses.

- 1 Numeric keys** → 35
Provide functions identical to those of the original remote control supplied with the component you are controlling.
- 2 LSTN M. key** → 29
Use to select the listening mode.
RETURN key
Use to operate other components.
- 3 SET UP key** → 18
Use to select speakers' settings etc.
MENU key
Use to operate other components.
- 4 SOUND key** → 30
Use to adjust the sound quality and ambience effects.
OSD key
Use to operate other components.
- 5 MULTI CONTROL keys** → 18
Use to control a variety of settings.
Use to operate other components.
P.CALL <◀/▶> keys → 25
If tuner is selected as the input source, these keys function as P.CALL keys.
<◀/▶> keys
If CD or MD is selected as the input source, these keys function as skip keys.
- 6 TUNING <◀/▶> keys**
Use to operate the tuner or selected component.
If CD, MD or TAPE is selected as the input source, these keys function as search keys.
- 7 B. BOOST key** → 20
Use to select the maximum adjustment setting for the low frequency range.
- 8 RECEIVER key**
Use to return to the operation of the receiver.
- 9 DISC SKIP key**
If CD is selected as the input source, this key functions as the multi-CD player disc skip key.
A/B key
If TAPE is selected as the input source, this key functions as the A and B play keys of a double cassette deck.
+100 key
Use to select the disc number with the multi-CD player.
- 10 TITLE key**
Use to operate other components.
- 11 TV SEL. key**
Use to operate other components.
- 12 INPUT SELECTOR keys (DVD, PHONO, CD/DVD, TUNER, MD/TAPE, VIDEO1, VIDEO2, AV AUX)** → 20
Use to select the input sources.
<◀/▶> DVD >>> keys
When in DVD player operations, these keys function as skip keys.
- 13 MUTE key** → 21
Use to temporarily mute the sound.
- 14 POWER (I/⏻) key** → 17
Use to turn the receiver on and off.
- 15 POWER key (TV, VCR, DVD)**
Use to turn the other components on and off.
- 16 PTY key** → 26
Use for PTY search.
- RDS DISP. key** → 24
Use to receive RDS broadcasts.
- 17 ENTER key**
Use to operate other components.
< key
If tape is selected as the input source, this key functions as the play key for side B of the cassette (the side facing away from the front of the deck).
- 18 BAND key** → 23
Use to select the broadcast band.
- >>> key**
If CD is selected as the input source, this key functions as the play/pause key.
If MD or TAPE is selected as the input source, this key functions as the play key.
- 19 AUTO key** → 23
Use to select the auto tuning mode.
■ key
If CD, MD or TAPE is selected as the input source, this key functions as the stop key.
- 20 II key**
Use to operate other components.
- 21 INPUT SEL. key**
Use to operate other components.
- 22 CHANNEL Δ/▽ keys**
Use to select the channel.
- 23 CINE. EQ key**
Use to switch the status of CINEMA EQ.
DISC SEL. key
Use to operate other components.
- 24 VOLUME keys** → 21
Use to adjust the receiver volume.

Remote control unit (RC-R0512) (KRF-V5050D)

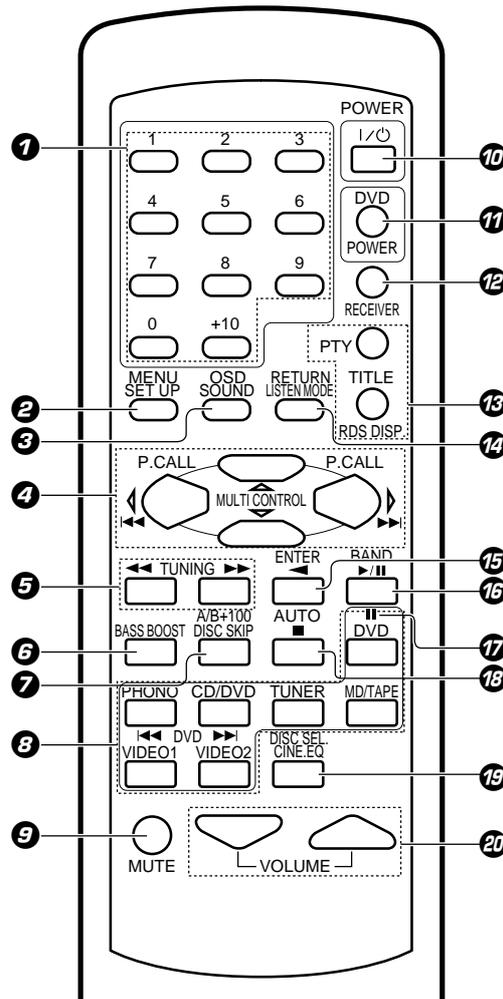**1 Numeric keys**

- 25

If CD or MD is selected as the input source, these keys function as numeric keys. If tuner is selected as the input source, these keys are used to call up station presets.

2 SET UP key

- 18

Use to select speakers' settings etc.

MENU key

Use to operate other components.

3 SOUND key

- 30

Use to adjust the sound quality and ambience effects.

OSD key

Use to operate other components.

4 MULTI CONTROL keys

- 18

Use to control a variety of settings.

P.CALL <◀/▶> keys

- 25

If tuner is selected as the input source, these keys function as P.CALL keys.

<◀/▶> keys

If CD or MD is selected as the input source, these keys function as skip keys.

5 TUNING <◀/▶> keys

If tuner is selected as the input source, these keys function as tuning keys.

If CD, MD or TAPE is selected as the input source, these keys function as search keys.

6 BASS BOOST key

- 20

Use to select the maximum adjustment setting for the low frequency range.

7 DISC SKIP key

If CD is selected as the input source, this key functions as the multi-CD player disc skip key.

A/B key

If TAPE is selected as the input source, this key functions as the A and B play keys of a double cassette deck.

+100 key

Use to select the disc number with the multi-CD player.

8 INPUT SELECTOR keys (DVD, PHONO, CD/DVD, TUNER, MD/TAPE, VIDEO1, VIDEO2)

- 20

Use to select the input sources.

9 MUTE key

- 21

Use to temporarily mute the sound.

10 POWER (I/O) key

- 17

Use to turn the receiver on and off.

11 DVD POWER key

- 34

Use to operate DVD player.

For details, refer to the instruction manual of your DVD player. (Press the DVD POWER key for more than 2 seconds.)

<◀ DVD ▶> keys

When in DVD player operations, these keys function as skip keys.

12 RECEIVER key

Use to return to the operation of the receiver.

13 TITLE key

Use to operate other components.

PTY key

- 27

Use for PTY search.

RDS DISP. key

- 24

Use to receive RDS broadcasts.

14 LISTEN MODE key

- 30

Use to select the listening mode.

RETURN key

Use to operate other components.

15 ENTER key

Use to operate other components.

◀ key

If tape is selected as the input source, this key functions as the play key for side B of the cassette (the side facing away from the front of the deck).

16 BAND key

- 23

Use to select the broadcast band.

▶/|| key

If CD is selected as the input source, this key functions as the play/pause key.

If MD or TAPE is selected as the input source, this key functions as the play key.

17 || key

Use to operate other components.

18 AUTO key

- 24

Use to select the auto tuning mode.

■ key

If CD, MD or TAPE is selected as the input source, this key functions as the stop key.

19 CINE.EQ key

Use to switch the status of CINEMA EQ.

DISC SEL. key

Use to operate other components

20 VOLUME keys

- 21

Use to adjust the receiver volume.

Setting up the system

8

Make connections as shown in the following pages.

When connecting the related system components, be sure to also refer to the instruction manuals supplied with the components you are connecting.

Do not connect the power cord to a wall outlet until all connections are completed.

DTS disclaimer clause

DTS Digital Surround™ is a discrete 5.1 channel digital audio format available on CD, LD, and DVD software which consequently cannot be decoded and played back inside most CD, LD, or DVD players. For this reason, when DTS-encoded software is played back through the analog outputs of the CD, LD, or DVD player, excessive noise will be exhibited. To avoid possible damage to the audio system, proper precautions should be taken by the consumer if the analog outputs are connected directly to an amplification system. To enjoy DTS Digital Surround™ playback, an external 5.1 channel DTS Digital Surround™ decoder system must be connected to the digital output (S/P DIF, AES/EBU, or TosLink) of the CD, LD or DVD player.

VIDEO 2/MONITOR jacks

The receiver's VIDEO 2/MONITOR jacks can be used in two different ways. Make the appropriate setting for the component connected to the jack when the receiver is turned on.


Use as a VIDEO 2 jack

You can connect a video deck or the like to these jacks and perform video playback and recording. The initial factory setting is "VIDEO 2".

Use as a MONITOR jack

You can connect a cassette deck or the like to these jacks and make use of the deck's monitoring function during recording. Alternately, you can connect a graphic equalizer to these jacks to apply compensation to the music signal.

To use the VIDEO 2/MONITOR jacks as MONITOR jacks, hold down the MONITOR key of the main unit for more than two seconds so that the indication shown below appears.

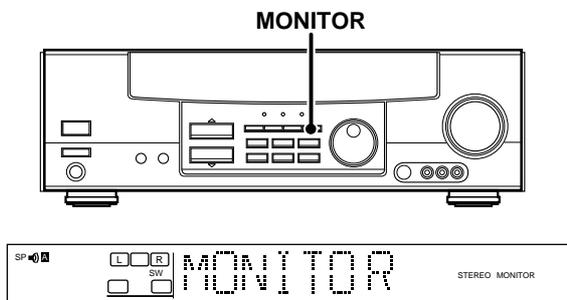

- To switch the setting back to "VIDEO 2", once again hold down the MONITOR key for two seconds or more.

Notes

1. Be sure to insert all connection cords securely. If their connections are imperfect, the sound may not be produced or noise may interfere.
2. Be sure to remove the power cord from the AC outlet before plugging or unplugging any connection cords. Plugging/unplugging connection cords without disconnecting the power cord can cause malfunctions and may damage the unit.
3. Do not connect power cords from components whose power consumption is larger than what is indicated on the AC outlet at the rear of this unit.

Analog connections

Audio connections are made using RCA pin cords. These cables transfer stereo audio signal in an "analog" form. This means the audio signal corresponds to the actual audio of two channels. These cables usually have 2 plugs on each end, one red for the right channel and one white for the left channel. These cables are usually packed together with the source unit, or are available at your local electronics retailer.

Input mode settings


CD/DVD, VIDEO2 and DVD/6ch inputs each include jacks for digital audio input and analog audio input.

You must select beforehand which type of input is to be used for each connected component.

The initial factory settings for audio signal playback (CD/DVD, DVD/6ch) and (VIDEO2) are digital and analog respectively.

To use the analog audio input for playback instead (if, for example, you have connected a VCR to the VIDEO2 input), you must set the input mode for the corresponding input to the analog mode.

After completing connections and turning on the receiver, follow the steps below.

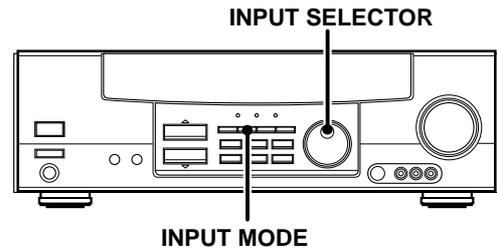

- 1 Use the INPUT SELECTOR knob to select CD/DVD, VIDEO2, or DVD/6ch.

- 2 Press the INPUT MODE key.

Each press switches the setting as follows:

In DTS play mode

- 1 D-AUTO (digital input, auto sound)
- 2 D-MANUAL (digital input, manual sound)

In DVD/6ch play mode

- 1 D-AUTO (digital input, auto sound)
- 2 D-MANUAL (digital input, manual sound)
- 3 6ch INPT (DVD/6ch input)
- 4 ANALOG (analog input, manual sound)

In modes other than DTS or DVD play mode

- 1 D-AUTO (digital input, auto sound)
- 2 D-MANUAL (digital input, manual sound)
- 3 ANALOG (analog input, manual sound)

Digital input:

Select this setting to play digital signals from a DVD, CD, or LD player.

Analog input:

Select this setting to play analog signals from a cassette deck, VCR, or turntable.


Auto sound:

In the auto sound mode (AUTO SOUND indicator lights), the receiver selects the listening mode automatically during playback to match the type of input signal (Dolby Digital, PCM, DTS) and the speaker setting. The initial factory setting is auto sound on.

To keep the receiver set to the currently selected listening mode, use the INPUT MODE key to select "D-MANUAL" (manual sound). However, even when this setting is selected, there may be cases in which the listening mode is selected automatically to match a Dolby Digital source signal depending on the combination of listening mode and source signal.


If the INPUT MODE key is pressed quickly, sound may not be produced.

Connecting audio components

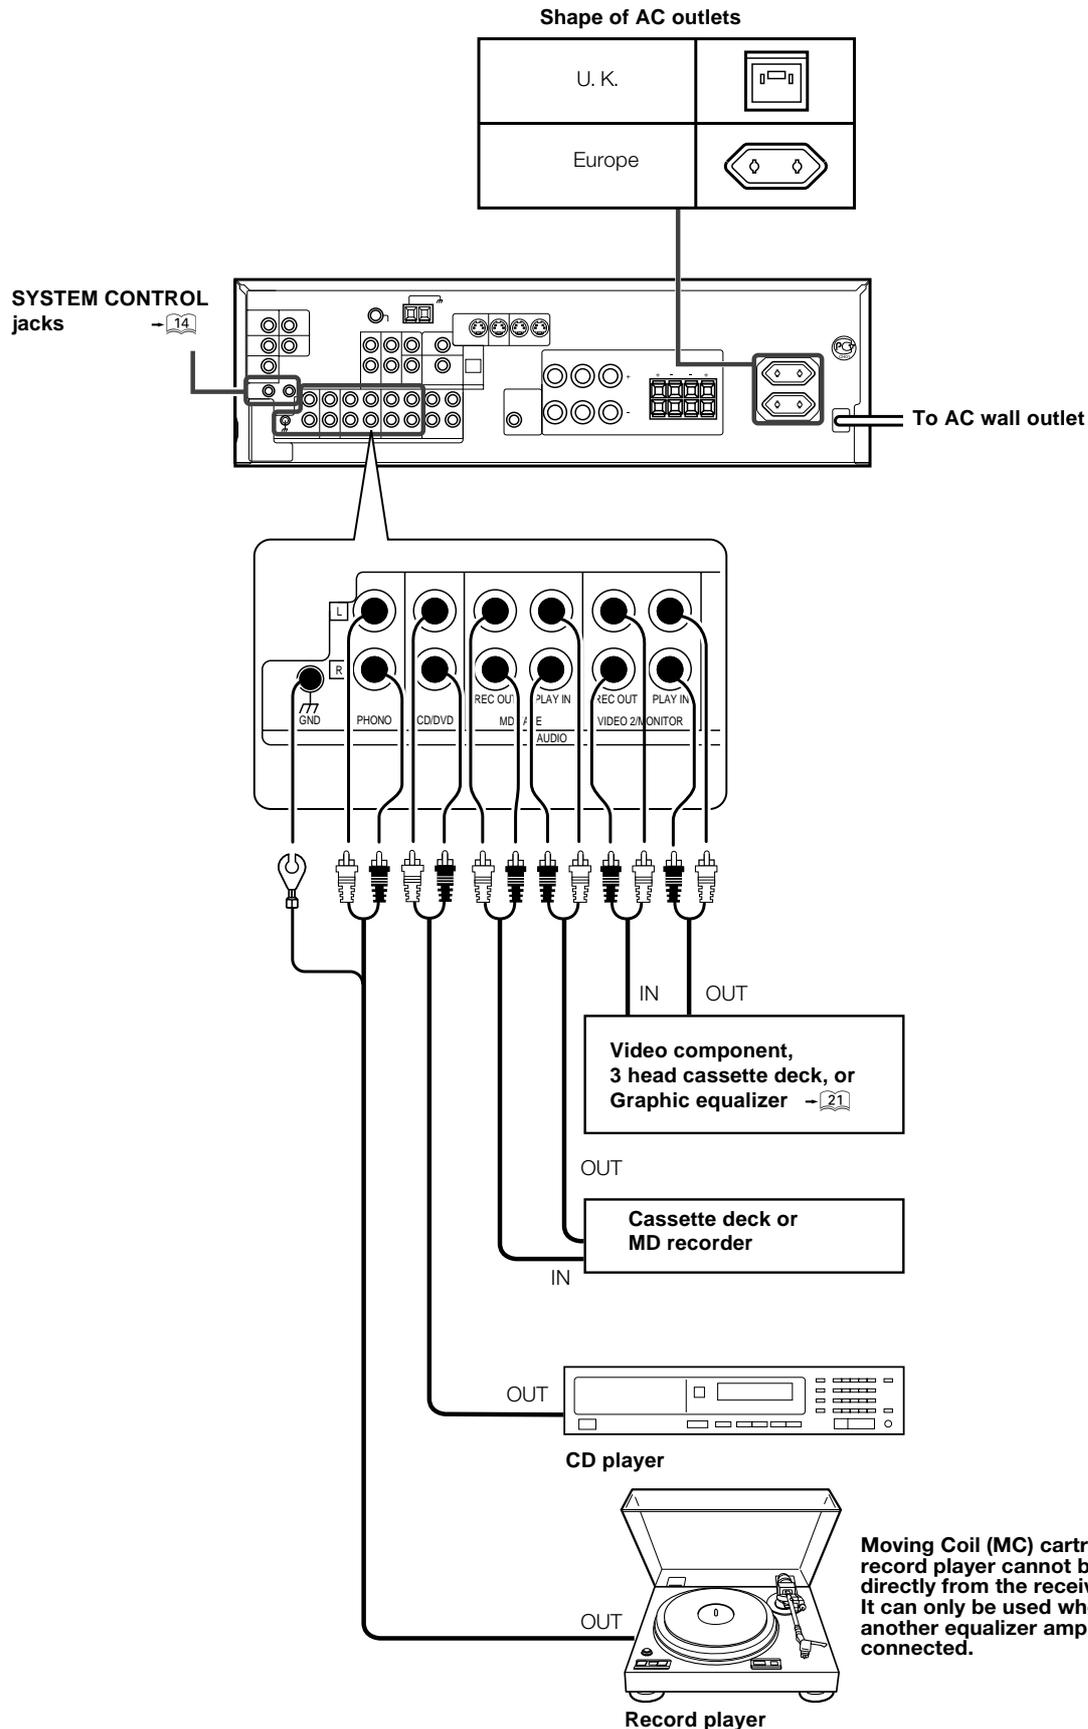


When you connect the audio cord of the video component to the VIDEO2/ MONITOR jacks, connect the video cord (yellow RCA pin cords) of the connected component to the VIDEO2 IN jack.

Connecting video components

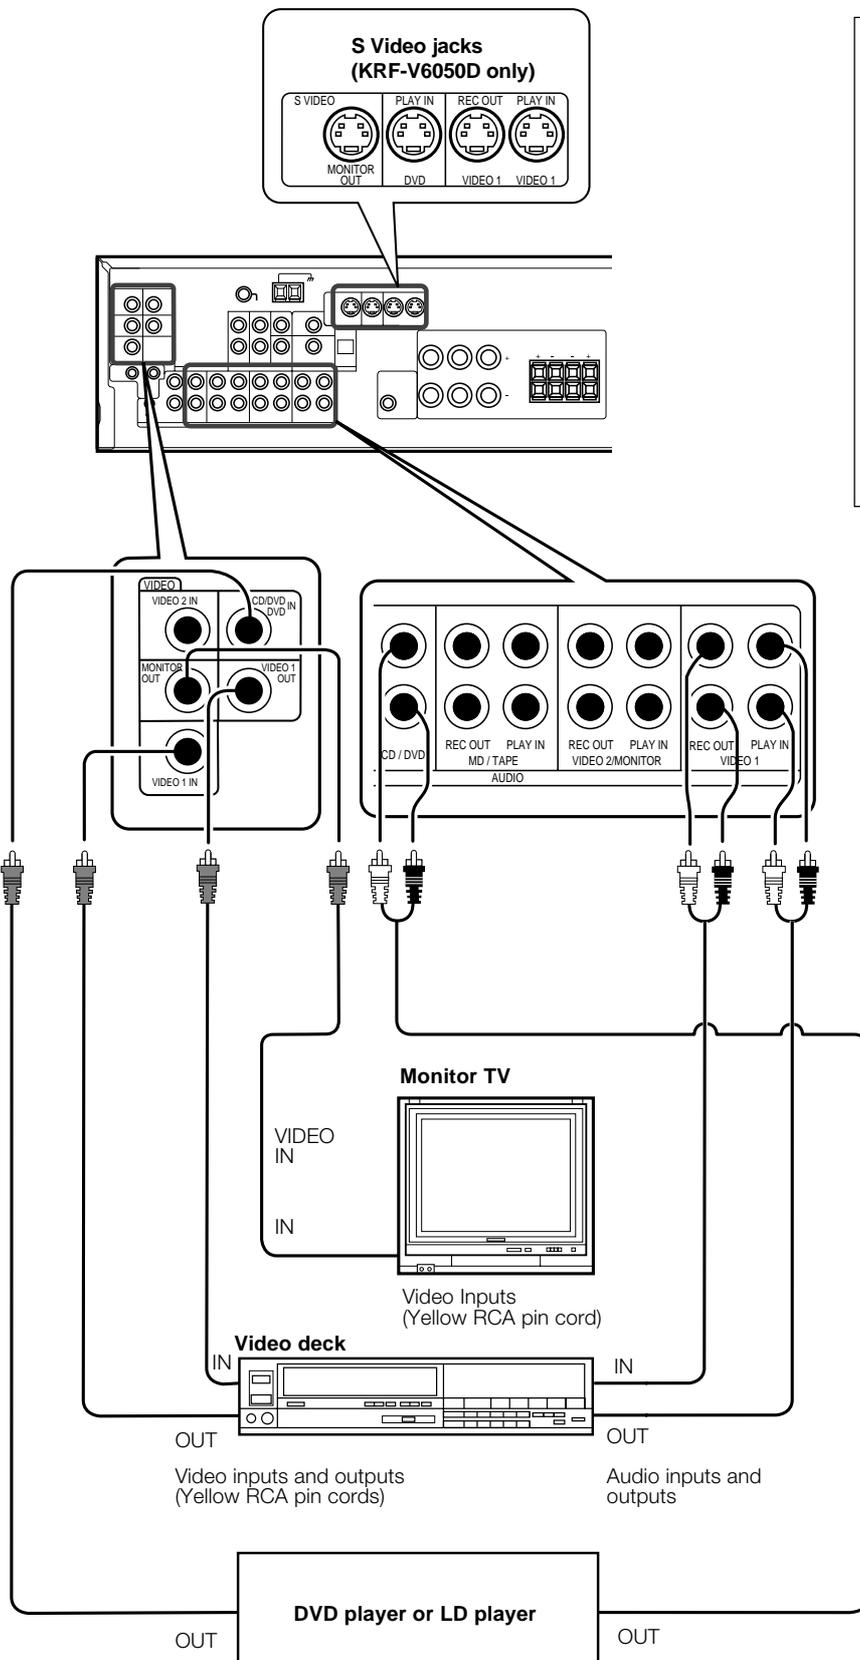

About the S VIDEO jacks

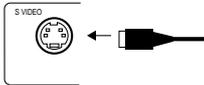


Use the S VIDEO jacks to make connections to video components with S VIDEO IN/OUT jacks.

- If you use the S VIDEO jacks to connect your video playback components, be sure to use the S VIDEO jacks when connecting your monitor and video recording components.

A video component with digital audio outputs should be connected to the VIDEO2 jacks.

Connecting a DVD player (6-channel input)

If you have connected a DVD player to the receiver with digital connection, be sure to read the "Input mode settings" section carefully. 

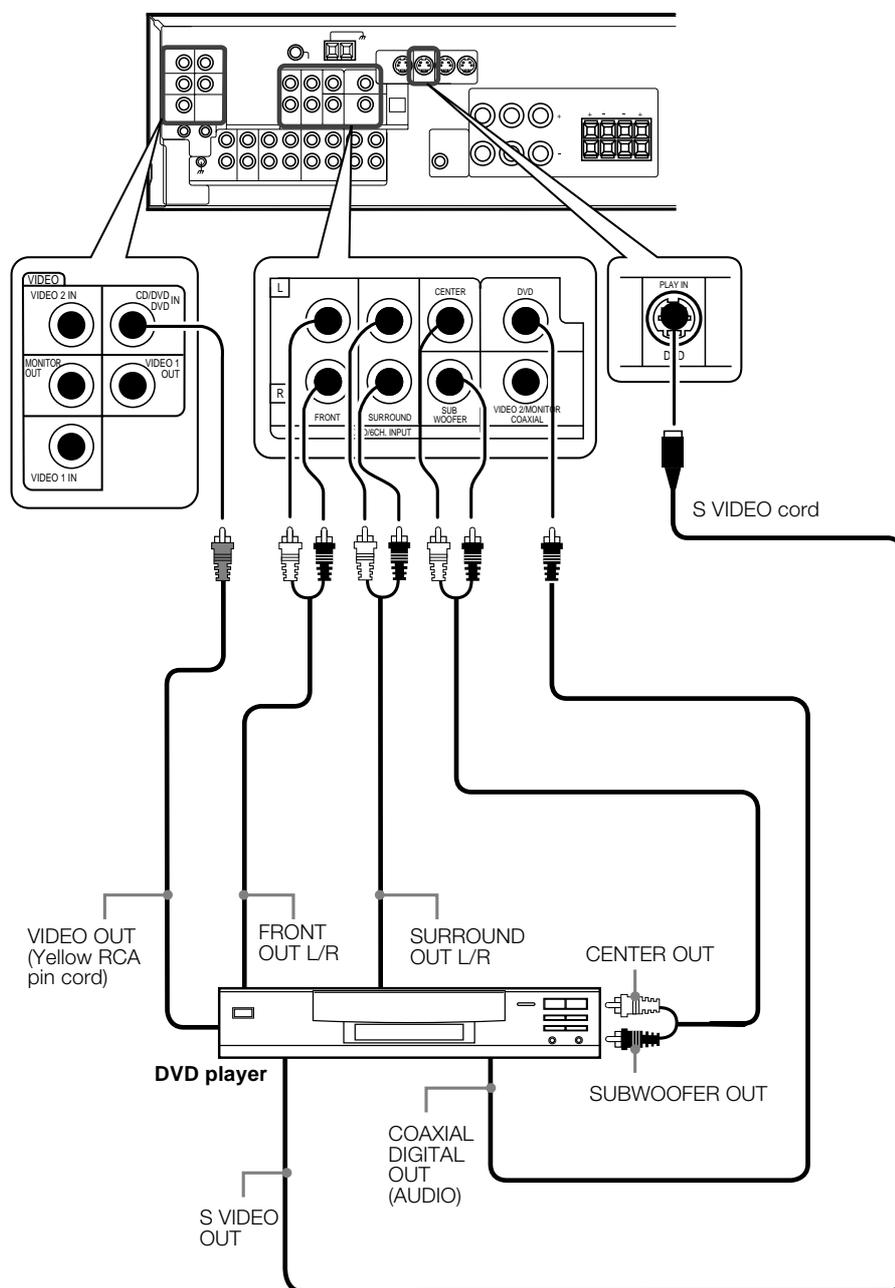


To switch the speakers off , press the MUTE key.

CAUTION
 Be sure to adhere followings. Or proper ventilation will be blocked causing damage or fire hazard.
 • Do not place any objects impairing heat radiation onto the top of unit.
 • Leave a space around the unit (from the largest outside dimension including projection) equal or greater than, shown below.
 Top panel : 50 cm Side panel : 10 cm Back panel : 10 cm

Digital connections

The digital in jacks can accept DTS, Dolby Digital, or PCM signals. Connect components capable of outputting DTS, Dolby Digital, or standard PCM (CD) format digital signals.

If you have connected any digital components to the receiver, be sure to read the "Input mode settings" section carefully. 

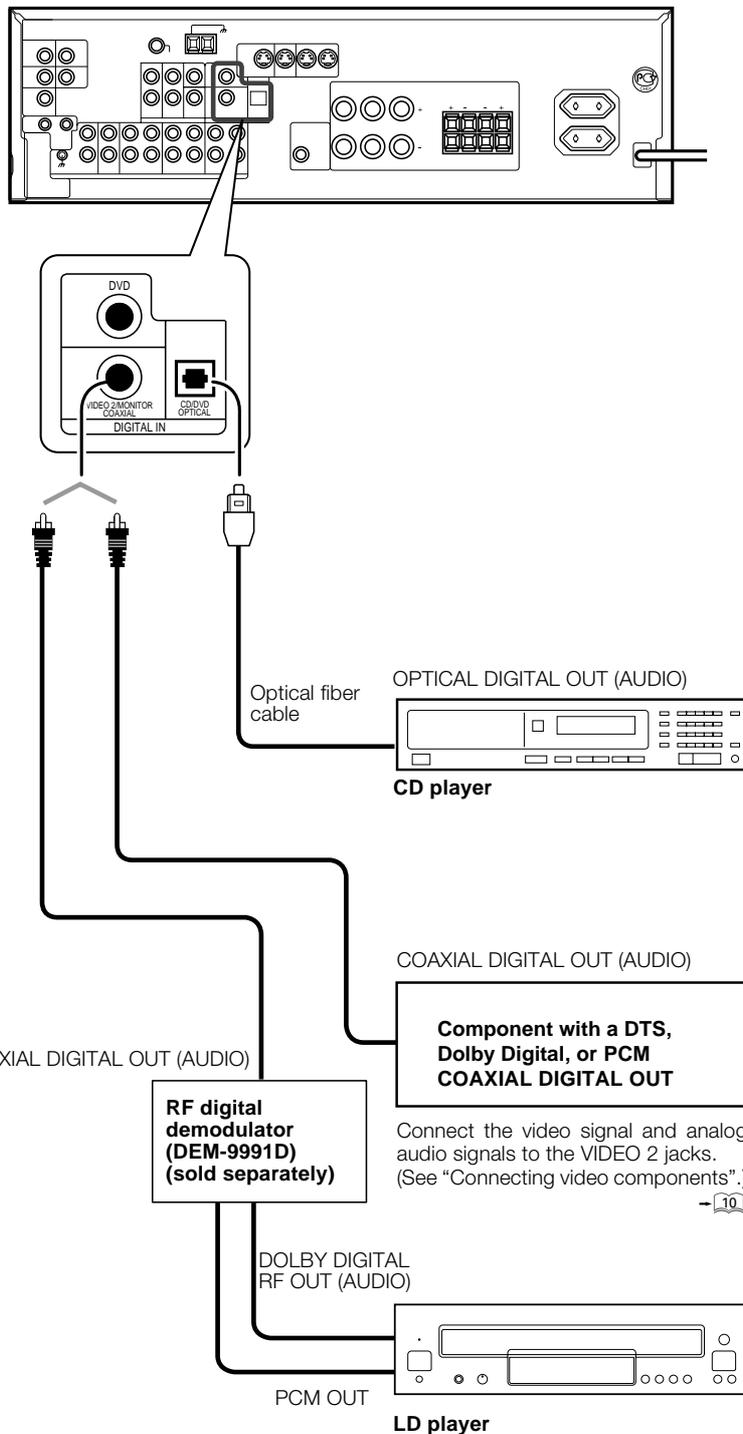


To connect an LD player with a DIGITAL RF OUT, connect the LD player to the KENWOOD RF digital demodulator (DEM-9991D). Next, connect the DIGITAL OUT jacks of the demodulator to the DIGITAL IN jacks of the receiver. Connect the video signal and analog audio signals to the VIDEO2/MONITOR jacks. (See "Connecting video components".)

Connecting to the AV AUX jacks

(KRF-V6050D only)

The **AV AUX** jacks are convenient for connection of video components such as a camcorder or a video game.

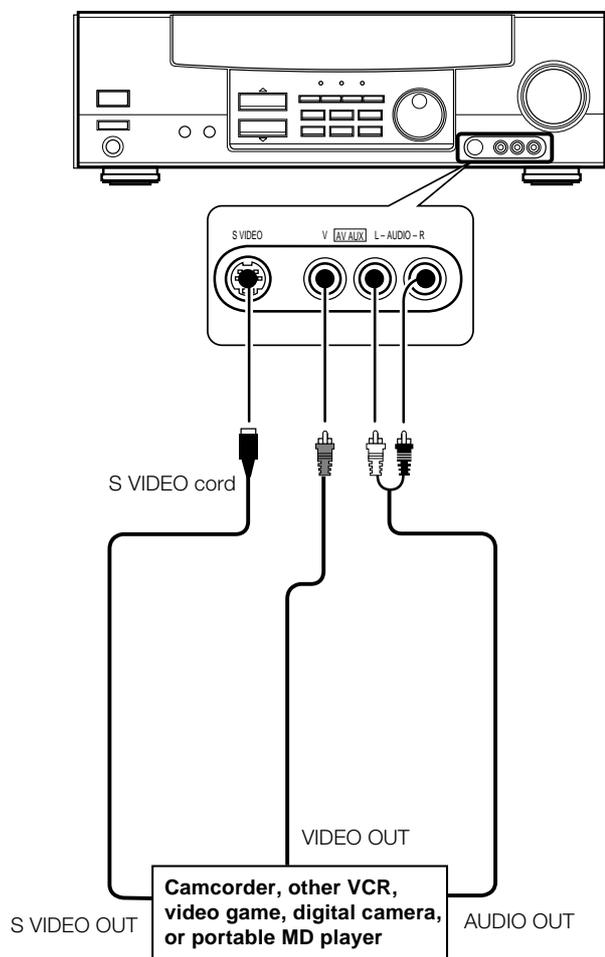

Connecting the antennas

AM loop antenna

The supplied loop antenna is for use indoors. Place it as far as possible from the receiver, TV set, speaker cords and power cord, and adjust the direction for best reception.

AM antenna terminal connections

- 1 Push lever.
- 2 Insert cord.
- 3 Release lever.



FM indoor antenna

The supplied indoor antenna is for temporary use only. For stable signal reception we recommend using an outdoor antenna. Disconnect the indoor antenna when you connect one outdoors.


FM antenna terminal connections

Insert cord.



FM outdoor antenna

Lead the 75Ω coaxial cable connected to the FM outdoor antenna into the room and connect it to the **FM 75Ω** terminal.

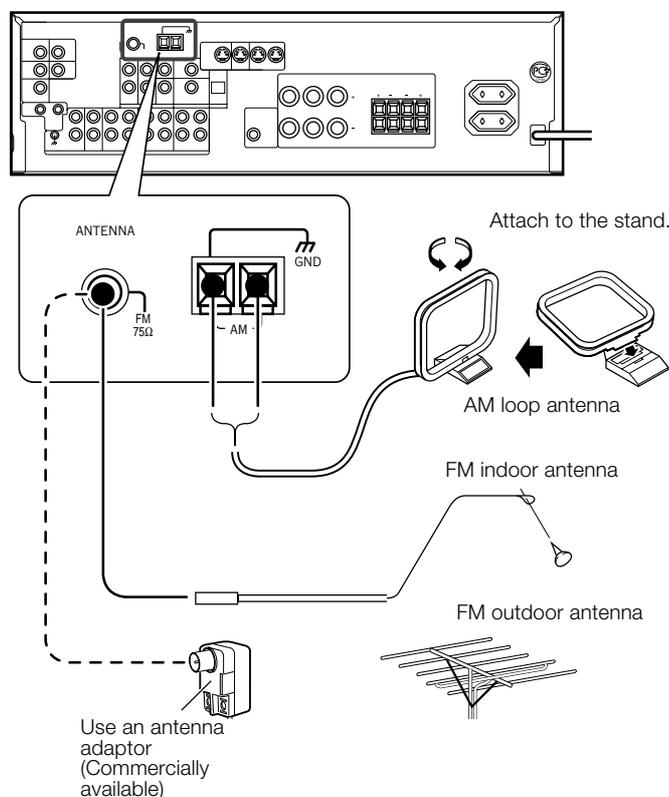


- To select the source connected to the AV AUX jacks, select AV AUX by using the INPUT SELECTOR knob. — 20
- When you connect the audio source such as the MD player, you do not need to connect the video cable.
- When you connect the unit and the component with the S VIDEO cord, you can get better picture quality.

Connecting the system control

Connecting system control cords after connecting a KENWOOD audio component system lets you take advantage of convenient system control operations.

This unit is compatible only with the [SL-16] mode. The system control operation is not available if the unit is connected in the [XS8], [XS], or [XR] connection mode.


If your component has the mode select switch, set the connected components to the [SL16] mode.

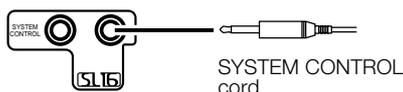

- You may connect the system control cord to either the left or right jack.

EXAMPLE: [SL16] mode connections

The underlined portion represents the setting of the system control mode.

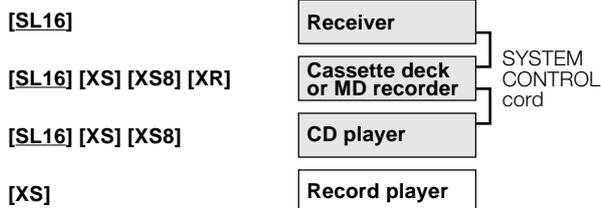

- In order to take advantage of the system control operations, the components must be connected to the correct jacks. To use a CD player it must be connected to the CD jacks. To use a cassette deck (or MD recorder) it must be connected to the MD/TAPE jacks. When using more than one CD player (etc.) only the one connected to the specified jacks may be connected for system control.
- Some CD players and cassette decks are not compatible with the [SL16] system control mode. Do not make system connections with equipment that is not [SL16] compatible.
- Some MD players are not system control compatible. You cannot make system control connections to this kind of equipment.

Notes

- [SL16] equipment cannot be combined with [XR], [XS], and [XS8] equipment for system operations. If your equipment consists of this kind of combination, please do not connect any system control cords. Even without system control cords, normal operations can be carried out without effecting performance.
- Do not connect system control cords to any components other than those specified by KENWOOD. It may cause a malfunction and damage your equipment.
- Be sure the system control plugs are inserted all the way in to the system control terminals.

Do not connect a system control cord to a cassette deck connected to the VIDEO/MONITOR jacks.

SYSTEM CONTROL OPERATIONS

Remote Control

Lets you operate this unit with the system remote supplied with the receiver.

Automatic Operation

When you start playback from a source component, the input selector on this unit switches to that component automatically.



Synchronized Recording

Lets you synchronize recording with the start of playback when recording from CD, MD or analog discs.

Registering setup codes for KENWOOD audio components (KRF-V6050D only)

- If you own remote controllable KENWOOD audio components that are not compatible with system control, registering the setup code enables you to control those components using the remote control supplied with this unit (without connecting system control cords). To register setup codes for your remote controllable KENWOOD audio components, see "Registering setup codes for other components".

Connecting the speakers

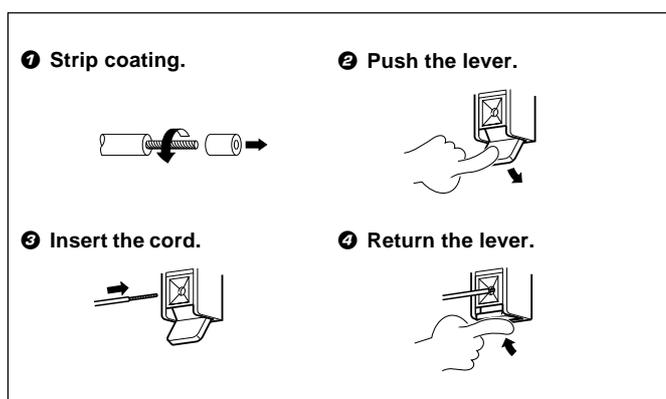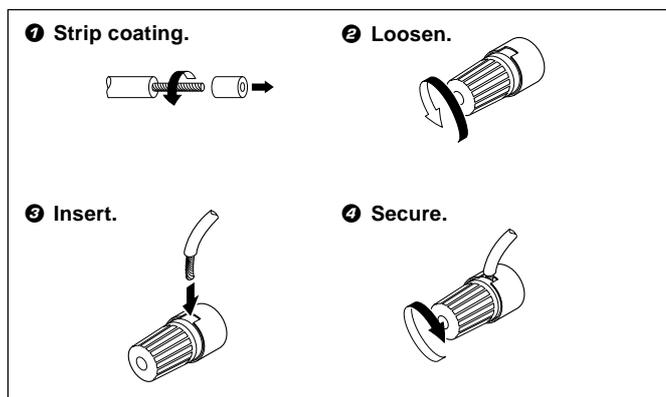


- Never short circuit the + and – speaker cords.
- If the left and right speakers are connected inversely or the speaker cords are connected with reversed polarity, the sound will be unnatural with ambiguous acoustic imaging. Be sure to connect the speakers correctly.

Speaker impedance

After confirming the speaker impedance indications printed on the rear panel of the receiver, connect speakers with matching impedance ratings. Using speakers with a rated impedance other than that indicated on the rear panel of the receiver could result in malfunctions or damage to the speakers or receiver.

Connecting the speakers

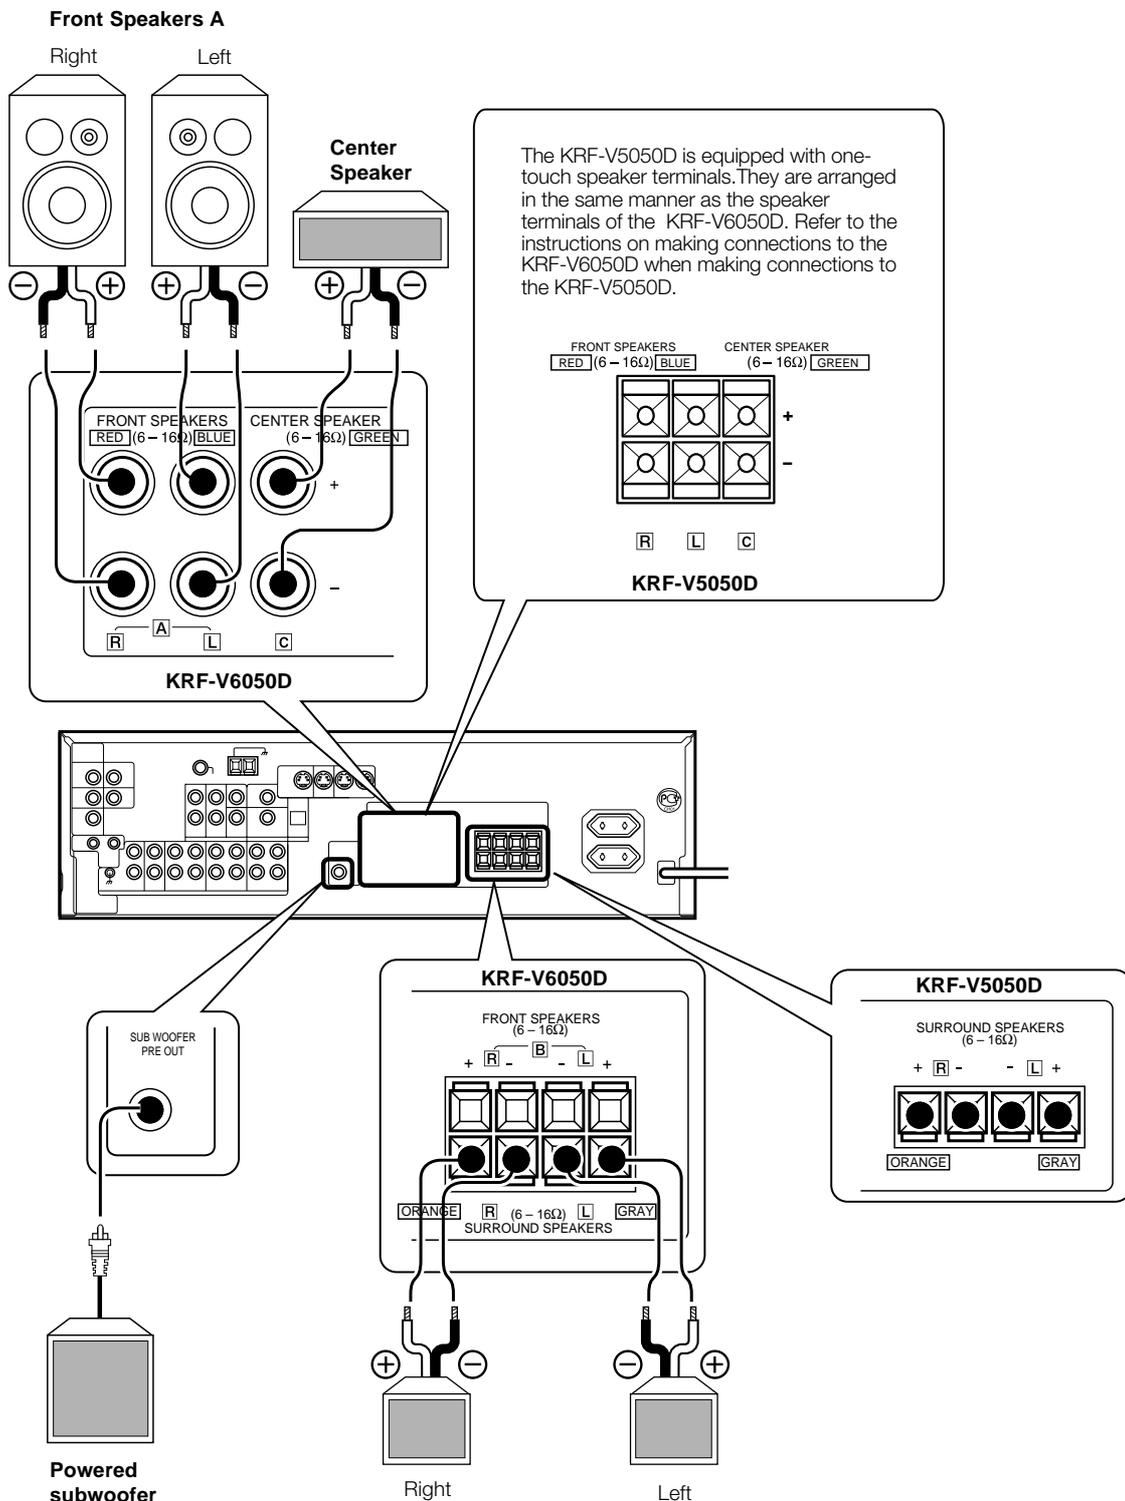


The KRF-V5050D is equipped with one-touch speaker terminals. They are arranged in the same manner as the speaker terminals of the KRF-V6050D. Refer to the instructions on making connections to the KRF-V6050D when making connections to the KRF-V5050D.

Surround Speakers
(Be sure to connect both surround speakers)

Use the FRONT SPEAKERS B terminals if you want to connect a second front speaker system (for KRF-V6050D only).

Speaker placement

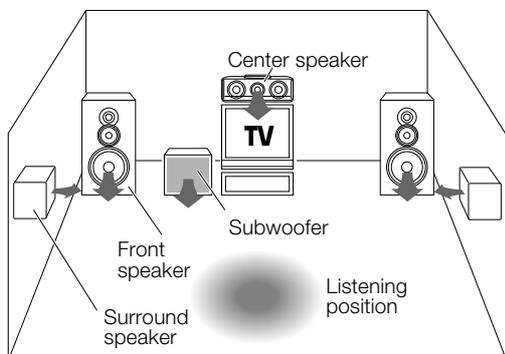

- Front speakers** : Place to the front left and right of the listening position. Front speakers are required for all surround modes.
- Center speaker** : Place front and center. This speaker stabilizes the sound image and helps recreate sound motion. Be sure to connect a center speaker when using the Dolby 3 Stereo mode.
- Surround speakers** : Place to the direct left and right, or slightly behind, the listening position at even heights, approximately 1 meter above the ears of the listeners. These speakers recreate sound motion and atmosphere. Required for surround playback.
- Subwoofer** : Reproduces powerful deep bass sounds.


• Although the ideal surround system consists of all the speakers listed above, if you don't have a center speaker or a subwoofer, you can divide those signals between the available speakers in the speaker settings steps to obtain the best possible surround reproduction from the speakers you have available.




Preparing the remote control

Loading the batteries


❶ Remove the cover.

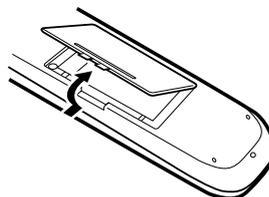

❷ Insert the batteries.

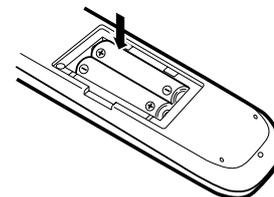

❸ Close the cover.

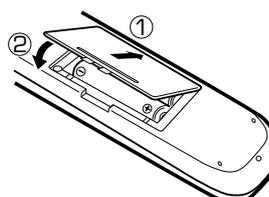


• Insert two AA-size (R6) batteries as indicated by the polarity markings.

Operation

When the **STANDBY** indicator is lit, the power turns ON when you press the **POWER** key on the remote control. When the power comes ON, press the key you want to operate.

Operating range (Approx.)

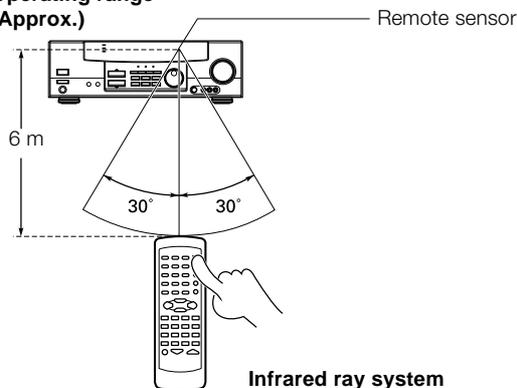

Infrared ray system

• When pressing more than one remote control key successively, press the keys securely by leaving an interval of 1 second or more between keys.


Notes

1. The supplied batteries may have shorter lives than ordinary batteries due to use during operation checks.
2. When the remote-controllable distance gets shorter than before, replace both batteries with new ones.
3. Placing the remote sensor in direct sunlight, or in direct light from a high frequency fluorescent lamp may cause a malfunction. In such a case, change the location of the system installation to prevent malfunction.

Preparing for surround sound

Speaker settings

To enable you to obtain optimum enjoyment from the receiver's listening modes, make sure to complete the speaker settings (subwoofer, front, center, and surround speakers) as described below.

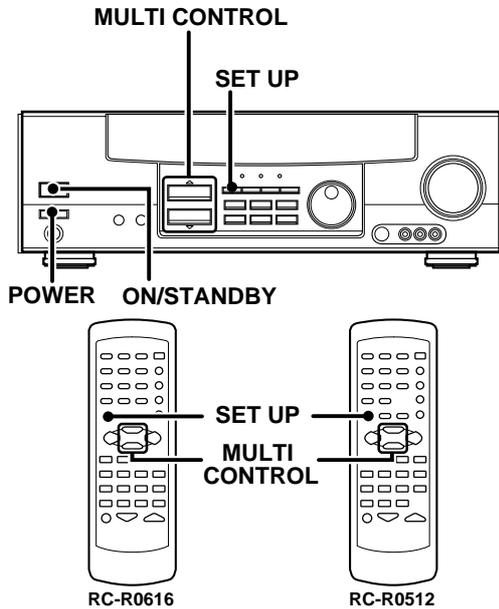

1 Turn on the power to this receiver by pressing **POWER** or **ON/STANDBY** key.

2 Select a speaker system.

1 Press the **SET UP** key such that the subwoofer setting indication (**SUBW ON**) appears.



2 Use the **MULTI CONTROL** keys to select the appropriate subwoofer setting.

- **1 SUBW ON:** Subwoofer setting mode to the receiver is ON.
- **2 SUBW OFF:** Subwoofer setting mode to the receiver is OFF.

- The initial setting is "SUBW ON".
- When "SUBW OFF" is selected, the front speakers are automatically set to "FRNT LRG" and the procedure skips to step **5**.
- When subwoofer output sound is required, select "FRNT NML".

3 Press the **SET UP** key again to accept the setting.

- The front speakers setting indication (**FRNT**) appears.



4 Use the **MULTI CONTROL** keys to select the appropriate front speakers setting.

- **1 FRNT NML (normal):** Average size front speakers are connected to the receiver.
- **2 FRNT LRG (large):** Large front speakers are connected to the receiver.

- For "FRNT LRG" selection, no sound will be heard from SUBW even when it is set to ON. However, if you select CINEMA EQ. when subwoofer is selected, you will be able to hear sound from the subwoofer.
- When in STEREO mode, the sound goes directly to front speaker.

5 Press the **SET UP** key again to accept the setting.

- The center speaker setting indication (**CNTR**) appears.

6 Use the **MULTI CONTROL** keys to select the appropriate center speaker setting.

If you have selected "LRG" as the front speakers setting,

- **1 CNTR LRG (large):** A large center speaker is connected to the receiver.
- **2 CNTR NML (normal):** An average size center speaker is connected to the receiver.
- **3 CNTR OFF:** Center speaker setting mode to the receiver is OFF.

If you have selected "NML" as the front speakers setting,

- **1 CNTR ON:** Center speaker setting mode to the receiver is ON.
- **2 CNTR OFF:** Center speaker setting mode to the receiver is OFF.

7 Press the **SET UP** key again to accept the setting.

- The surround speaker setting indication (**SURR**) appears.

8 Use the **MULTI CONTROL** keys to select the appropriate surround speaker setting.

If you have selected "LRG" as the center speaker setting,

- **1 SURR LRG (large):** Large surround speakers are connected to the receiver.
- **2 SURR NML (normal):** Average size surround speakers are connected to the receiver.
- **3 SURR OFF:** Surround speaker setting mode to the receiver is OFF.

If you have selected other than "LRG" as the center speaker setting,

- **1 SURR ON:** Surround speaker setting mode to the receiver is ON.
- **2 SURR OFF:** Surround speaker setting mode to the receiver is OFF.

9 Press the **SET UP** key again to accept the setting.


- The receiver enters the speaker volume level adjustment mode.
- In steps **3** and **4**, indications appear only for the selected channels of the speakers that require adjusting.

3 Adjust the speaker volume.


From your usual listening position, adjust the volume levels. The volume levels from each speaker should be the same.

1 Use the **MULTI CONTROL** keys to adjust the volume of the test tone output from the speaker channel to be adjusted.

The channel indication blinks while the test tone is being output.

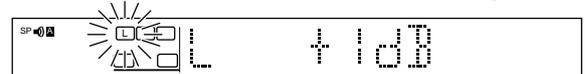

The test tone is heard from the speakers for 2 seconds at a time in the following sequence for 2 seconds each:

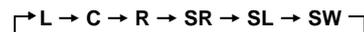


- If you change the volume level settings for the speakers while listening to music, the settings referred to on this page are also changed. → 30
- If the speaker setting selects are changed, the speaker level settings are reset.

2 Press the **SET UP** key.

- The test tone is turned off. The receiver enters the mode for inputting the distance to the speakers.

Preparing for playback

Some preparatory steps are needed before starting playback.

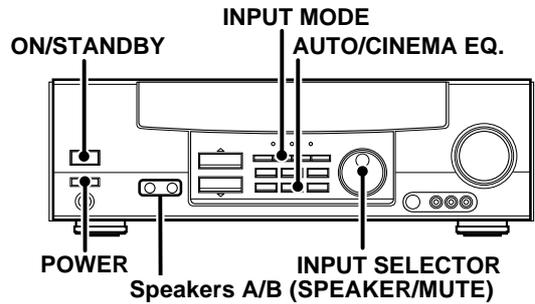

Selecting the input mode

If you have selected a component connected to the **CD/DVD**, **DVD/6ch**, or **VIDEO2/MONITOR** jacks, make sure that the input mode setting is correct for the type of audio signal to be used. → 8

Selecting MD/TAPE

Select the source name corresponding to the component connected to the MD/TAPE jacks. The initial factory setting is "TAPE". To change the source name to "MD," follow the steps below:


- 1 Use the **INPUT SELECTOR** knob to select "TAPE".
- 2 Hold down the **AUTO/CINEMA EQ.** key for more than 2 seconds.
 - The source indication changes to "MD".
 - To return to the original indication, repeat procedure 2.

Selecting the speaker system (KRF-V6050D only)

Press the **SPEAKERS A** or **B** key to select the speaker system to be used.


- A ON** : Sound from the speakers connected to the **SPEAKERS A** terminals on the rear panel.
- B ON** : Sound from the speakers connected to the **SPEAKERS B** terminals on the rear panel.
- A+B ON** : Sound from both the speakers connected to the **SPEAKERS A** and **B** terminals on the rear panel.
- A+B OFF** : No sound from the speakers. Use this setting when listening with headphones for stereo sound and virtual surround in all playback modes.

The indicator for the speakers you want to use should be lit.

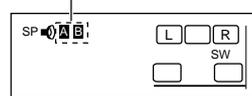

KRF-V6050D

The speaker indicator lights.

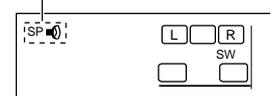

KRF-V5050D

- Selecting "6ch INPT" by pressing the **INPUT MODE** key, whereby "DVD/6ch" is the input source, will cause **SPEAKER A** to be selected automatically.

On the KRF-V5050D, press the **SPEAKER** key to switch the speakers on and off.

Turning on the receiver

- 1 Turn on the power to the related components.
- 2 Turn on the power to this receiver by pressing **POWER** (and **ON/STANDBY**) keys.

4 Input the distance to the speakers.


- 1 Measure the distance from the listening position to each of the speakers.

Not down the distance to each of the speakers.

- Distance to front speakers: _____ feet (meters)
- Distance to center speaker: _____ feet (meters)
- Distance to surround speakers: _____ feet (meters)

- 2 Use the **MULTI CONTROL** keys to select the distance to the front speakers.

The speaker indicator to be adjusted blinks.

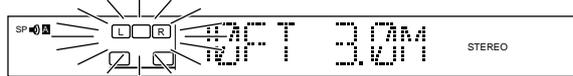

Indication in feet Indication in meters

- The allowable setting range is 1 to 30 feet (0.3 to 9.0 m), adjustable in 1 foot (0.3 m) increments.

- 3 Press the **SET UP** key to accept the settings.
- 4 Repeat steps 2 and 3 to input the distance for each of the speakers.
- 5 Setup is complete when the input indication reappears.




Display when all speakers have been selected.

- The speakers you have selected should appear on the display. Confirm that all the speakers have been correctly selected.

Input level adjustment (analog sources only)

If the input level of an analog source signal is too high, adjust the input level. The **CLIP** indicator will blink to indicate the source signal.

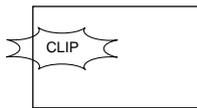

- 1 Use the **INPUT SELECTOR** knob to select the input level of the source you want to adjust.

- You can store a separate input level for each input source. If the **MONITOR** function is on, you can store an input level for when **MONITOR** is on independently of the input levels for the input sources.

- 2 Press the **SOUND** key repeatedly until the "INPUT" indication appears.


- 3 Use the **MULTI CONTROL** keys to adjust the input level.



- The adjustment mode is displayed for approximately eight seconds.
- The input level may be adjusted to any one of three settings: 0dB, -3dB, and -6dB. (The initial setting is 0dB.)

- 4 Press the **SOUND** key again to return to the input indication.

Listening to a source component

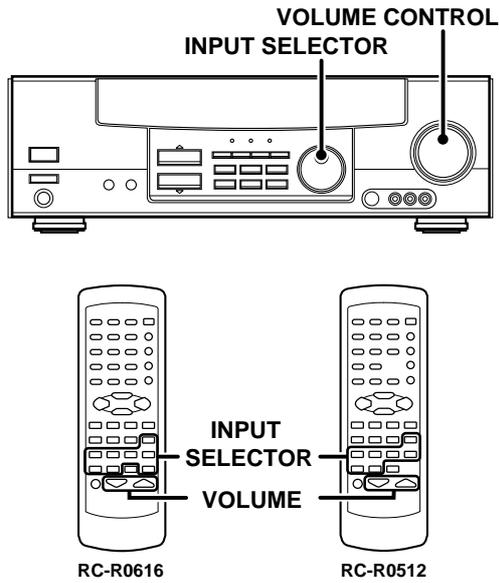

1 Use the INPUT SELECTOR to select the source you want to listen to.

The input sources change as shown below:
Selecting a source using the **INPUT SELECTOR** knob.

KRF-V6050D

- ① "PHONO"
- ② "TUNER"
- ③ "CD/DVD"
- ④ "TAPE" or "MD"
- ⑤ "VIDEO1"
- if VIDEO2/MONITOR is VIDEO2
- ⑥ "VIDEO2"
- ⑦ "DVD/6ch"
- ⑧ "AV AUX"
- else if VIDEO2/MONITOR is MONITOR
- ⑥ "DVD/6ch"
- ⑦ "AV AUX"

KRF-V5050D

- ① "PHONO"
- ② "TUNER"
- ③ "CD/DVD"
- ④ "TAPE" or "MD"
- ⑤ "VIDEO1"
- if VIDEO2/MONITOR is VIDEO2
- ⑥ "VIDEO2"
- ⑦ "DVD/6ch"
- else if VIDEO2/MONITOR is MONITOR
- ⑥ "DVD/6ch"


2 Start playback from the selected source.

3 Use the VOLUME CONTROL knob (VOLUME keys) to adjust the volume.

Selecting VIDEO 2/MONITOR

Depending on the component connected to the **VIDEO 2/MONITOR** jacks, select either the "VIDEO 2" setting or the "MONITOR" setting, as appropriate.

Adjusting the sound

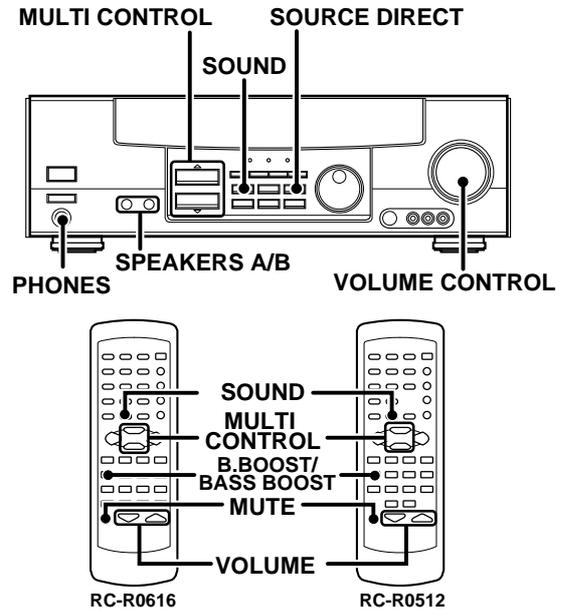

Adjusting the tone

You can adjust the sound quality when the receiver is in the PCM stereo and analog stereo mode.

1 Press the SOUND key to select the tone mode to be adjusted.

BASS: Select this to adjust the low frequency range.
(Press the **SOUND** key once.)

TREB: Select this to adjust the high frequency range.
(Press the **SOUND** key twice.)



2 Use the MULTI CONTROL keys to adjust the sound quality.

- The bass and treble levels are adjustable from -10dB to +10dB in 2 step increments.
- The adjustment item is displayed for approximately 8 seconds.

Once-touch low frequency emphasis (bass boost) (remote control only)

You can adjust the sound quality when the receiver is in the PCM stereo and analog stereo mode.

Press the B. BOOST (BASS BOOST) key.

- Press the key once to select the maximum (+10dB) low frequency emphasis setting.
- This key does not function when the receiver is in the sound quality or ambience effects adjustment mode.


Switching back to the previous setting

Press the **B. BOOST (BASS BOOST)** key again.

Muting the sound

The **MUTE** key lets you mute the sound of the speakers.

Press the **MUTE** key.

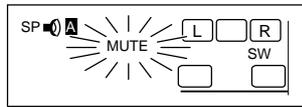

Blinks

To cancel

Press the **MUTE** key again so that the “**MUTE**” indicator goes off.

- **MUTE ON** can also be deactivated by turning the volume control knob.

SOURCE DIRECT playback (for analog input sources only)

Use this function to pass the source material direct to the amplifier, bypassing any audio processing.

Press the **SOURCE DIRECT** key.



- When you press the **LISTEN MODE**, **SOUND**, or **SET UP** keys, or switch to another input source, **SOURCE DIRECT** playback will be canceled.

To cancel

Press the **SOURCE DIRECT** key again.


- If **SOURCE DIRECT** playback was activated while in a surround mode, canceling **SOURCE DIRECT** playback will reactivate the previous surround mode.

Listening with headphones

- 1 (KRF-V6050D) Press the **SPEAKERS A** or **B** key so that the speaker indicator goes off.


(KRF-V5050D) Press the **SPEAKER** key so that the speaker indicator goes off.

Make sure the **SPEAKERS** indicators are turned off.

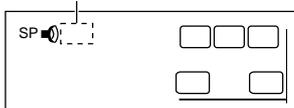

KRF-V6050D


Make sure the **SP** indicators are turned off.

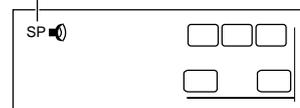

KRF-V5050D


- If you turn off all of the speakers when in the surround mode, the surround mode will be canceled as well, resulting in stereo playback.

- 2 Connect the headphones to the **PHONES** jack.

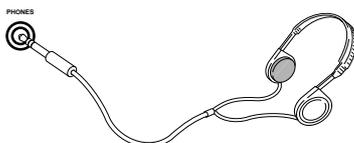

- 3 Use the **VOLUME CONTROL** knob (**VOLUME** keys) to adjust the volume.

Recording audio (analog sources)

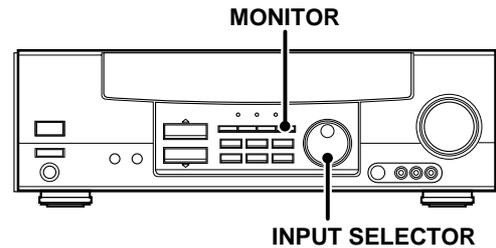

Recording a music source

When recording a music source, switch the **VIDEO2/MONITOR** setting to “**MONITOR**”.

- 1 Use the **INPUT SELECTOR** knob to select the source (other than “**MD/TAPE**”) you want to record.
- 2 Set the cassette deck or MD recorder to record.
- 3 Start playback, then start recording.

Recording tapes or MD (with MONITOR function)

When recording a music source, switch the **VIDEO2/MONITOR** setting to “**MONITOR**”.

MONITOR → MD/TAPE recording

- 1 Press the **MONITOR** key.
- 2 Use the **INPUT SELECTOR** knob to select a source other than “**MD/TAPE**”.
- 3 Start playback on the cassette deck connected to the **MONITOR** jacks and start recording on the cassette deck or MD recorder connected to the **MD/TAPE** jacks.

MD/TAPE → MONITOR recording

- 1 Use the **INPUT SELECTOR** knob to select “**MD/TAPE**”.
- 2 Start playback on the cassette deck connected to the **MD/TAPE** jacks and start recording on the cassette deck or MD recorder connected to the **VIDEO2/MONITOR** jacks.

- To copy tapes using a double cassette deck, refer to the instruction manual of the double cassette deck.

MONITOR function (analog sources only)

You can connect a cassette deck or graphic equalizer to the **VIDEO2/MONITOR** jacks of the receiver. If a graphic equalizer is connected, the **MONITOR** key should be left in the on position. Alternately, if a cassette deck equipped with a 3-head system is connected to the **VIDEO2/MONITOR** jacks, you will be able to monitor the just-recorded signal while making recordings on the cassette deck. By switching the **MONITOR** key on and off, you can compare the sound of the source signal and the just-recorded signal. For more information, refer to the instruction manual of the connected component.

Recording video

- ❶ Use the **INPUT SELECTOR** to select the video source (other than "VIDEO1") you want to record.
- ❷ Set the video deck connected to **VIDEO 1** to record.
 - Select the REC MODE to record a digital input source.
- ❸ Start playback, then start recording.
 - Recording may not be normal for some video software. This is due to the copy guard condition. → [38]


Recording audio (digital sources)

Switch on the **REC** mode to record a digital input source. Usually use the **A-REC (Auto-Record)** mode to record audio input sources. When the digital mode changes during recording in the **A-REC** mode, the audio input source may be interrupted momentarily. To record the audio input source from the beginning of the digital mode change, use the **M-REC (Manual-Record)** mode.

For A-REC mode:




For M-REC mode:

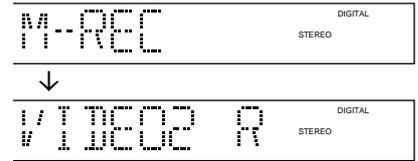

- ❹ Start playback, then start recording.
 - If the audio reproduction stops in the middle due to change in the input signals, etc., press the **DIMMER** key.

Recording music in A-REC or M-REC mode

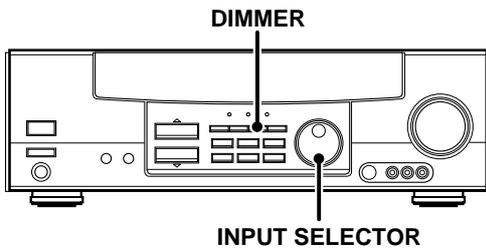



- ❶ Use the **INPUT SELECTOR** to select the source (CD, DVD, or VIDEO2) you want to record.
- ❷ Set the cassette deck to record.
- ❸ Press and hold the **DIMMER** key for more than 2 seconds to select the A-REC or M-REC mode.
 - The mode changes every 2 seconds as shown below.

- | | |
|--|---|
| <ol style="list-style-type: none"> ➤ ❶ Rec mode off : ➤ ❷ A-REC : ➤ ❸ M-REC : | <p>The digital input record mode is switched off.</p> <p>The digital input signals (DTS, Dolby Digital, or PCM) are identified automatically and converted into stereo signals that are ready for recording.</p> <p>The input signal type at the moment this mode is selected is held throughout this mode.</p> |
|--|---|

Listening to radio broadcasts

Tuning (non-RDS) radio stations

Radio stations can be classified into RDS (Radio Data System) stations and other stations. To listen to or store RDS stations in the preset memory, see the section entitled, "Using RDS".

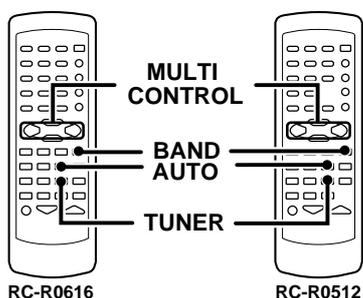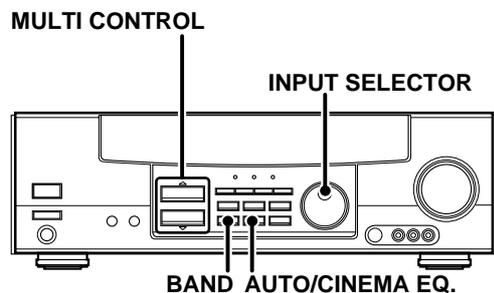

1 Use the **INPUT SELECTOR** knob (**TUNER** key) to select the tuner.

2 Use the **BAND** key to select the desired broadcast band.

Each press switches the band as follows: "AM" or "FM" appears in the display.

- ① FM
- ② AM




3 Use the **AUTO/CINEMA EQ.** key to select the desired tuning method.

Each press switches the tuning method as follows:

- ① **AUTO** lit (auto tuning)
- ② **AUTO** not lit (manual tuning)

"AUTO" indicator lights up in the display.

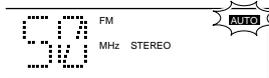

- Normally, set to "AUTO" (auto tuning). If the radio waves are weak and there is a lot of interference, switch to manual tuning. (With manual tuning, stereo broadcasts will be received in monaural.)

4 Use the **MULTI CONTROL** keys to select the station.

Frequency display "ST." lights up when a broadcast is being received in stereo.



"TUNED" is displayed when a station is received.

- Auto tuning** : The next station is tuned automatically.
- Manual tuning** : Turn the knob (or press the key) to select the desired station.

Using RDS (Radio Data System)

RDS is a system that transmits useful information (in the form of digital data) for FM broadcasts along with the broadcast signal. Tuners and receivers designed for RDS reception can extract the information from the broadcast signal for use with various functions, such as automatic display of the station name.

RDS functions:

PTY (Program Type Identification) Search → 26
Automatically tunes to a station that is currently broadcasting the specified program type (genre).

PS (Program Service Name) Display
Automatically displays the station name transmitted by the RDS station.

RDS AUTO MEMORY function → 24
Automatically selects and stores up to 40 RDS stations in the preset memory. If fewer than 40 RDS stations have been stored in the preset memory, regular FM stations will be stored in the remaining places.

Radio Text function
Displays the radio text data transmitted by some RDS stations when you press the **RDS DISP.** (Display) key. There is no "NO RT" display if no text data is transmitted.


The "RDS" indicator lights up when an RDS broadcast (signal) is received.



Note
Some functions and function names may differ for certain countries and areas.

Before using a function utilizing the RDS, be sure to perform the RDS Auto Memory operation by referring to the description in "Presetting RDS stations (RDS AUTO MEMORY)". → 24

Using the RDS DISP. (Display) key

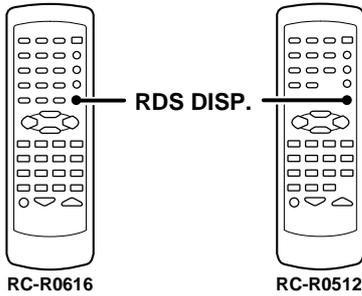

Pressing the RDS DISP. key changes the contents of the display.

Each press switches the display mode as follows:

- ① PS (Program Service name) display
- ② RT (Radio Text) display
- ③ Frequency display

① PS (Program Service name) display:

The station name is displayed automatically when an RDS broadcast is received. If no PS data was sent, "NO PS" is displayed.



② RT (Radio Text) display:

Text data accompanying the RDS broadcast scrolls across the display. "NO RT" or "RT----" is displayed if the current RDS station does not provide RT data.




③ Frequency display:

Displays the frequency of the current station.



Presetting RDS stations (RDS AUTO MEMORY)

This function automatically stores up to 40 RDS stations in the preset memory. In order to use the PTY function, the RDS stations must be stored in the preset memory using the RDS AUTO MEMORY function.

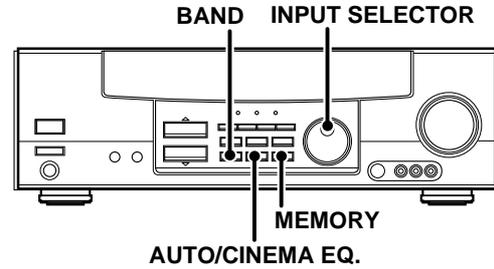

1 Use the INPUT SELECTOR knob to select the tuner.

2 Use the BAND key to set the broadcast band to "FM".


3 Press and hold the MEMORY key for more than 2 seconds.



- After a few minutes, up to 40 RDS stations are preset in order from channel "01".
- Stations already stored in the preset memory may be replaced by RDS stations. (i.e., If the RDS AUTO MEMORY function detects 15 RDS stations, the stations currently preset at numbers 01-15 will be replaced by the RDS stations.)


Presetting radio stations manually

The RDS auto memory function assigns preset numbers to RDS stations starting from preset number "1". Therefore, be sure to execute the RDS auto memory function before using the following operations to manually store AM stations and other FM stations, and RDS stations.
 "Presetting RDS stations (RDS AUTO MEMORY)".

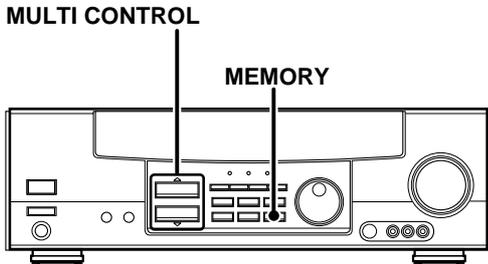

1 Tune to the station you want to store.

2 Press the MEMORY key while receiving the station.

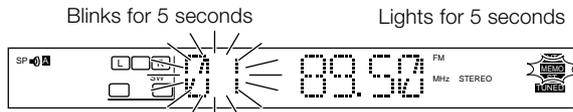


Proceed to step **3** within 5 seconds.
 (If more than 5 seconds elapse, press the MEMORY key again.)

3 Use the MULTI CONTROL keys to select one of the station presets (1 – 40).

4 Press the MEMORY key to accept the setting.

- Repeat steps **1**, **2**, **3**, and **4** to store as many stations as necessary.
- If you store a station at a previously used preset, the old station will be replaced by the new one.

Receiving preset stations

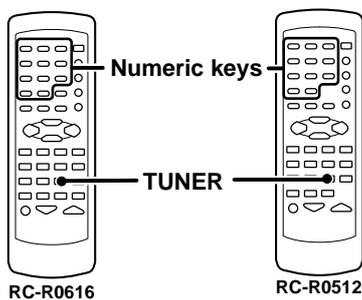


1 Press TUNER key to select the tuner as the source.

2 Enter the number of the preset you want to receive (up to "40".)


Press the numeric keys in the following order:

For "15", press **+10**, **5**
 For "20", press **+10**, **+10**, **0**

- If you make a mistake entering a two digit number, press the **+10** key several times to return to the original display and start again.

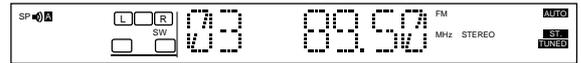

Receiving preset stations in order (P.CALL)

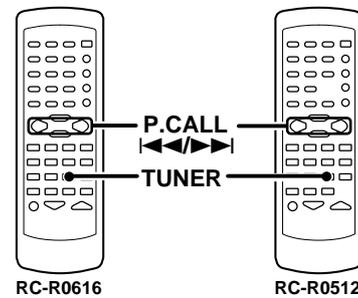

1 Press TUNER key to select the tuner as the source.

2 Use the P.CALL **▶▶|** keys to select the desired station.

- Each time you press the key, another preset station is received in order.

Pressing the P.CALL **▶▶|** key does the following:

→01→02→03→ ... → ... 38→39→40

Pressing the P.CALL **◀◀|** key does the following:


◀01◀02◀03◀ ... ◀ ... 38◀39◀40

Holding down the **▶▶|** or **◀◀|** keys, lets you skip through the presets, receiving each at preset station 0.5 second intervals.

Tuning by program type (PTY search)

This function lets you set the tuner to automatically search for stations which are currently broadcasting the type of program (genre) you want to listen to.

Under certain receiving conditions, it may take more than 1 minute to complete the search.

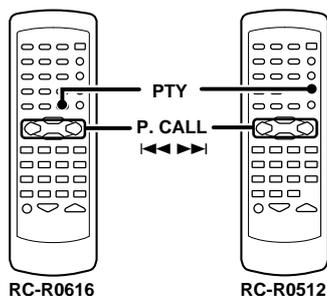

Preparations

- Execute the RDS auto memory procedure.
- Set the broadcast band to FM.
- Tune to an RDS station.

1 Press the PTY key to activate the PTY search mode.



When an RDS broadcast is received, the program type is shown on the display. If no PTY data is available, or if the station is not an RDS station, "NONE" is displayed.

2 While the "PTY" indicator is lit, use the P. CALL keys to select the program type of your choice.

Program type table

Program Type Name	Display	Program Type Name	Display
News	NEWS	Weather	WEATHER
Current Affairs	AFFAIRS	Finance	FINANCE
Information	INFO	Children's Program	CHILDREN
Sport	SPORT	Social Affairs	SOCIAL
Education	EDUCATE	Religion	RELIGION
Drama	DRAMA	Phone In	PHONE IN
Culture	CULTURE	Travel	TRAVEL
Science	SCIENCE	Leisure	LEISURE
Varied Speech	VARIED	Jazz Music	JAZZ
Pop Music	POP M	Country Music	COUNTRY
Rock Music	ROCK M	National Music	NATION M
Easy Music	EASY M	Oldies Music	OLDIES
Light Classical Music	LIGHT M	Folk Music	FOLK M
Serious Classical Music	CLASSICS	Documentary	DOCUMENT
Other Music	OTHER M		

"NO PROG" is displayed if this operation is attempted before performing the RDS Auto Memory operation.


3 Press the PTY key to start searching.

EXAMPLE: Searching for a Rock Music broadcast.

Display while searching.



Display when a station is received.

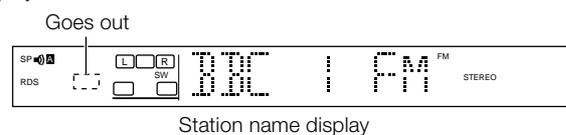

- No sound is heard while "PTY" is blinking.
- If the desired program type cannot be found, "NO PROG" is displayed, then after several seconds the display returns to the original display.

To select another program type

Repeat steps 1, 2 and 3.

Ambience effects

This receiver is equipped with listening modes that allow you to enjoy an enhanced sonic ambience with a variety of video sources.


In order to obtain the optimum effect from the surround modes, make sure to input the proper speaker settings beforehand.



Surround modes

DTS

The DTS multi-channel audio format is available on CD, LD and DVD software. DTS is a strictly digital format and can not be decoded inside most CD, LD or DVD players. For this reason, if you attempt to listen to DTS encoded software through the analog output of your new CD, LD or DVD player, you will experience digital noise in most cases. This noise can be quite loud if the analog output is connected directly to a high power amplification system. Proper measures for playing the digital output as described below should be taken to avoid this situation. To enjoy DTS Digital Surround playback, an external 5.1 channel DTS Digital Surround decoder system or an amplifier with a built-in DTS Digital Surround decoder must be connected to the digital output (S/P DIF, AES/EBU or TosLink) of a CD, LD or DVD player. All models are incorporated with the DTS decoder.

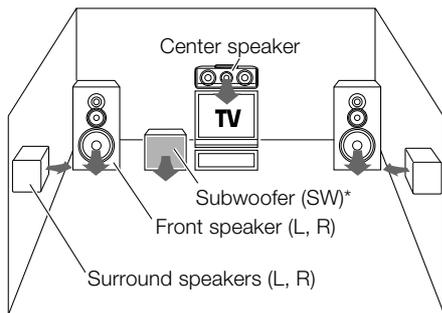

* Optional in this mode.

* LFE = Low Frequency Effects. This channel delivers separate non-directional bass signals to the subwoofer for more dynamic deep bass sound effects.

DTS has a .1 or LFE channel.

The indication "LFE" appears in the display when a signal is being input for this channel.

Manufactured under license from Digital Theater Systems, Inc. US Pat. No. 5,451,942 and other worldwide patents issued and pending. "DTS" and "DTS Digital Surround" are trademarks of Digital Theater Systems, Inc. © 1996 Digital Theater Systems, Inc. All rights reserved.




Manufactured under license from Dolby Laboratories. Dolby, Pro Logic and the double-D symbol are trademarks of Dolby Laboratories. Confidential Unpublished Works. ©1992-1997 Dolby Laboratories. All rights reserved.

Dolby Digital

The Dolby Digital surround format lets you enjoy up to 5.1 channels of digital surround sound from Dolby Digital program sources (such as Laserdisc or DVD software marked ). Compared with previous Dolby surround, Dolby Digital provides even better sound quality, greater spatial accuracy, and improved dynamic range.

Note

Although a full set of speakers (front left, right, and center, surround left and right, and a subwoofer) is required for true 5.1 channel Dolby Digital surround sound, this receiver lets you enjoy Dolby Digital (and Dolby Surround) program sources, even if you connect only the front speakers.

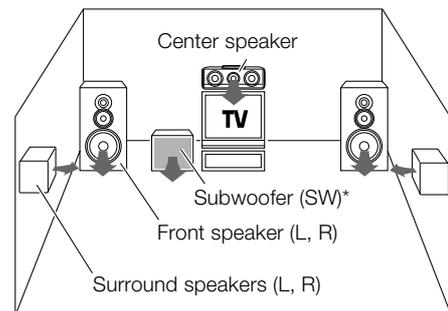


* LFE = Low Frequency Effects. This channel delivers separate non-directional bass signals to the subwoofer for more dynamic deep bass sound effects.

Although only Dolby Digital soundtracks incorporate a separate low frequency channel, connecting a subwoofer will also improve deep bass performance in the other surround modes.

The indication "LFE" appears in the display when a signal is being input for this channel.


Dolby Pro Logic

Dolby Pro Logic is a specially encoded 2 channel surround format designed to provide theater-like surround sound from Dolby Surround encoded sources (such as video and Laserdisc software marked ). This receiver is equipped with a Dolby Pro Logic surround decoder to let you enjoy the wide variety of currently available Dolby Surround home video software. Surround signal is monaural.

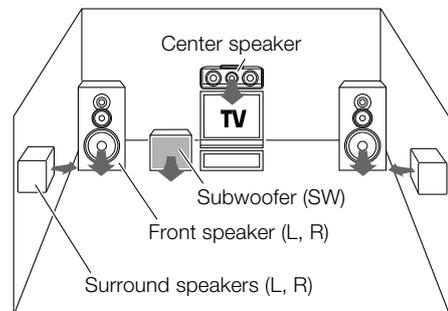


Dolby 3 Stereo

Dolby 3 Stereo is available for systems that do not have surround speakers. When in the Dolby 3 Stereo mode, the surround information is redirected to the front left and right speakers. This mode is designed for use with Dolby Surround program sources, but can also improve sound field unity for programs that are not Dolby Surround encoded. Dialog positioning and sound image definition, however, may not be as accurate when used with programs that are not Dolby Surround encoded.

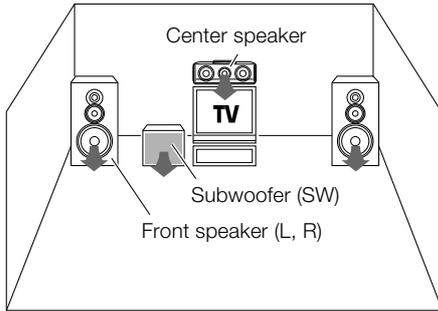

DVD 6-channel mode


Using a DVD player or the like equipped with six (5.1) output channels and the receiver, you can enjoy multi-channel encoded DVD source material in all its splendor. Since the source signals are digital and each channel is input independently, the resulting sound quality, sense of spaciousness, and dynamic range are superb.

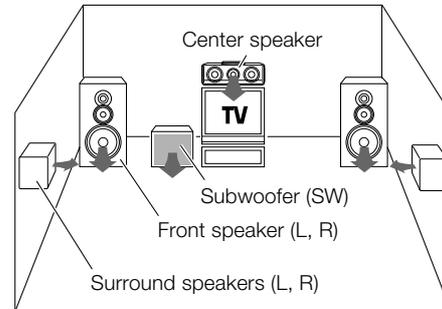

* LFE = Low Frequency Effects. This channel delivers separate non-directional bass signals to the subwoofer for more dynamic deep bass sound effects.

DSP mode

The DSP mode lets you add the atmosphere of a live concert or hall to almost any type of program source. These modes are particularly effective when used with stereo program sources, like CD, television, and FM radio. You might enjoy trying the ARENA, JAZZ CLUB, THEATER, STADIUM or DISCO mode the next time you watch a concert or sporting event!

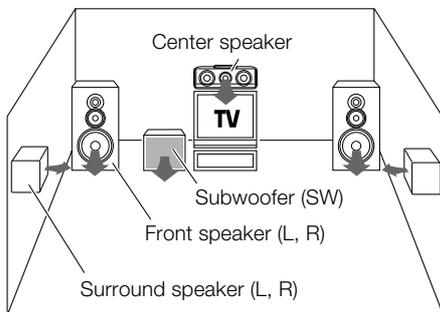



What's DSP?

DSP stands for Digital Signal Processor. The way a sound is heard in an actual environment depends on a variety of different factors. One of the most important is reverberation (the act of decaying elements of sound echoing in various places). The DSP modes produce the feeling of presence by using the DSP to create reverberation, without spoiling the sound quality of the original signal.

Surround Play

The DTS compatible models can reproduce a CD, DVD, or LD carrying the DTS mark.

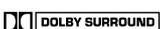DOLBY DIGITAL can be used when playing DVD or LD software bearing the  mark and DOLBY DIGITAL format digital broadcasts (etc.). DOLBY PRO LOGIC and DOLBY 3 STEREO can be used when playing video, DVD, or LD software bearing the  mark.

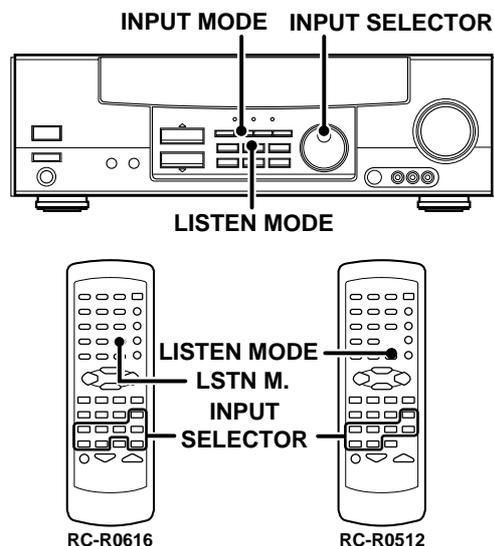

Preparations

- Turn ON related components.
- Complete "Preparing for surround sound" (speaker settings). - 18
- Use the **INPUT SELECTOR** to select the component you wish to play back with surround sound.
- Use the **INPUT MODE** key to select the input mode (analog or digital) for the source you wish to play back. - 8
- Noise will be produced when a DTS source is played by selecting the analog input.

1 Start playing the video software.

2 Press the LISTEN MODE (LSTN M.) key to select the listening mode.

The listening mode settings are stored separately for each input. If the input mode is set to digital auto ("AUTO SOUND" lights), the receiver selects the optimal listening mode automatically based on the type of input signal and the speaker settings.

Each press of the LISTEN MODE (LSTN M.) key switches the setting as listed below.

The listening mode settings are different depending on the type of input signal.

When the DOLBY DIGITAL signal is input:

- 1 **DOLBY DIGITAL**: DOLBY DIGITAL surround (The DOLBY DIGITAL indicator lights up.)
- 2 **PRO LOGIC**: PRO LOGIC surround (The PRO LOGIC indicator lights up.)
- 3 **3 STEREO**: 3-STEREO surround (The 3 STEREO indicator lights up.)
- 4 **STEREO**: Normal stereo playback

When you select DOLBY DIGITAL



When the DTS signal is input:

(The DTS indicator lights up.)

- 1 **DTS**: DTS surround
- 2 **STEREO**: Normal stereo playback

When the analog or digital signal (except for the DOLBY DIGITAL or DTS signal) is input:

- 1 **PRO LOGIC**: PRO LOGIC surround (The PRO LOGIC indicator lights up.)
- 2 **3 STEREO**: 3-STEREO surround (The 3 STEREO indicator lights up.)
- 3 **ARENA**: DSP surround.
- 4 **JAZZ CLUB**: DSP surround.
- 5 **THEATER**: DSP surround.
- 6 **STADIUM**: DSP surround.
- 7 **DISCO**: DSP surround.
- 8 **STEREO**: Normal stereo playback. Sound is produced from the two front channels only.

- If a Dolby Digital signal having more channels than the maximum number of playback channels available using the receiver's current settings is input, the **DOWNMIX** indicator on the front panel lights up and downmixing is performed to match the number of available channels.

3


Adjust the volume.

Notes

- Depending on the type of the signal or speaker setting, some listening modes cannot be selected.
- When playback is started, the sound may be cut or interrupted before the input source is confirmed as Dolby Digital.
- To enjoy Dolby Digital surround (as well as all the other listening modes) from a single component, be sure to use a Dolby Digital compatible source component. Connect the Dolby Digital compatible source component's Dolby Digital format digital audio signal to one of the **DIGITAL INPUT** jacks on the back of the receiver. Connect the normal audio signal correctly to the respective component's **AUDIO** jacks. - 9 - 10 - 11 - 12

DVD 6-channel playback

Using a DVD player or the like equipped with six (5.1) output channels and the receiver, you can enjoy surround sound playback. When you try to play a disc other than Dolby Digital such as DTS CD, no sound is produced or, noise may be heard. To avoid this situation, make sure that you connect the component to the receiver's DVD/6ch. INPUT jacks through a surround processor which can decode the surround signal you want to listen to. Connecting a DVD player which can decode the surround signal itself is also acceptable.

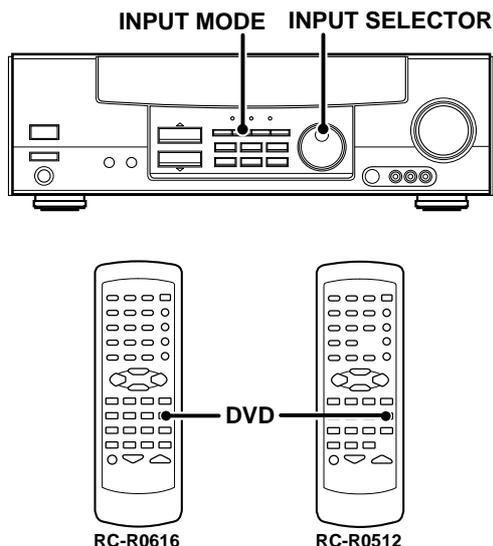

Preparations

- Connect your DVD player to the DVD/6ch jacks of the receiver.
- Turn on all other components that will be used.
- Complete "Preparing for surround sound". 

1 Select "DVD/6ch" as the input source.

- If speaker system B is on when "DVD/6ch" is selected as the input source, it switches off and speaker system A turns on automatically.


2 Select "6ch INPT" by pressing the INPUT MODE key.

3 Start playback of the DVD software.

4 Adjust the volume.

- It is not possible to adjust the volume level or sound quality (SET UP, SOUND) of the channels separately when the receiver is in the DVD/6ch mode. Adjust the volume with the controls of the DVD player. For the powered subwoofer, you can adjust the volume of the subwoofer using the subwoofer's own volume control.

Convenient functions

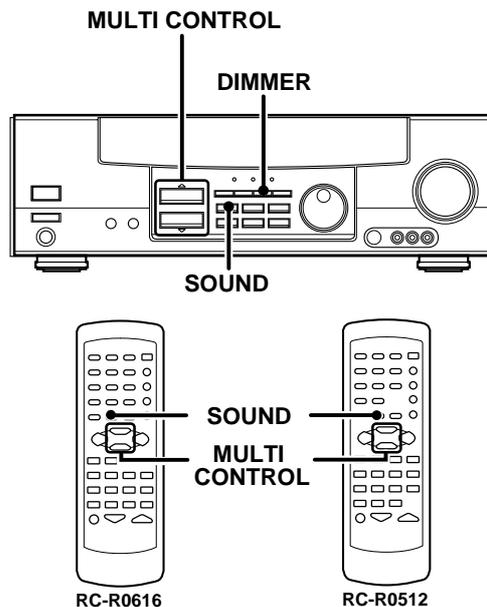

Adjusting the sound

You can make further adjustments to the sound while listening to playback in the surround mode.

- 1 Press the SOUND key repeatedly until the desired item appears in the display.

Each time you press the button, the menu changes as follows:
Note that some items are not displayed in certain modes.

- 1 BASS (low frequency range sound quality adjustment) 
- 2 TREB (high frequency range sound quality adjustment) 
- 3 C (center speaker level adjustment)
- 4 SR (right surround speaker level adjustment)
- 5 SL (left surround speaker level adjustment)
- 6 SW (subwoofer level adjustment)
- 7 INPUT (input level adjustment) 
- 8 NIGHT (midnight mode on/off-Dolby Digital mode only)

- 2 Use the MULTI CONTROL keys to adjust the setting as desired.
 - The adjustment item is displayed for approximately 8 seconds.

Midnight mode (Dolby Digital mode only)

When watching movies at night, you might not be able to raise the volume as loud as normal. Midnight mode compresses the dynamic range of previously specified parts of the Dolby Digital sound track (like scenes with sudden increases in volume) to minimize the difference in volume between the specified and non-specified parts. This makes it easy to hear all of the sound track, even when listening at low volumes.

- 1 Press the SOUND key repeatedly until "NIGHT" appears on the display.
 - This can be selected only if DVD or VIDEO2 is selected as the source and the listen mode is set to "DOLBY DIGITAL."

- ② Use the MULTI CONTROL keys to select the ON or OFF setting.




- The adjustment item is displayed for approximately 8 seconds.
- Some Dolby Digital software may not be compatible with the Midnight mode.

Display dimmer adjustment

The dimmer function lets you select the brightness of the receiver's display. You might find this useful if you darken your room to watch movies or listen to music.

Each time you press the DIMMER key, the display brightness changes among the three available settings. Select the brightness level you find most pleasing.

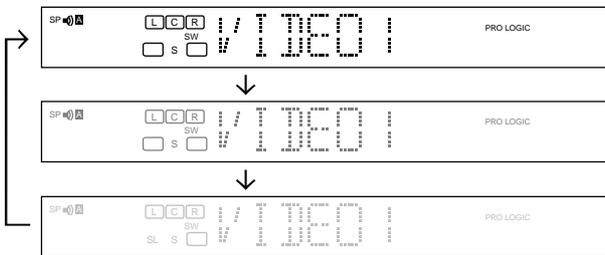

96kHz LPCM playback

The receiver is compatible with the 96kHz LPCM playback. To play a 96kHz DVD, set the listen mode to "STEREO".

- When "96kHz" appears in the display, press the LISTEN MODE key (the listen mode changes to the STEREO mode).

Setup code chart (KRF-V6050D (RC-R0616))**TV Setup codes**

Maker	Setup codes
BLAUPANKT	401
GRUNDIG	402
MIVER	401
NOKIA	403
NORDMENDE	404, 405
PHILIPS	406
SABA	404, 407
SCHNEIDER	408
TELEFUNKEN	407, 409, 410
THOMSON	411
AKAI	408
FENNER	412
FISHER	413
HITACHI	414, 415
INNO-HIT	416
IRRADIO	408
JVC	417
MAGNAVOX	406
OKANO	416
ORION	418
PANASONIC	419, 420
SAMSUNG	421
SANYO	413
SHARP	422
SONY	423, 424, 425, 426, 427
TOSHIBA	428
LOEWE	429, 430

VCR Setup codes

Maker	Setup codes
BLAUPANKT	501
GRUNDIG	502
LOEWE	503, 504
NOKIA	505
NORDMENDE	506, 507, 508
PHILIPS	509
SABA	510
SIEMENS	502
TELEFUNKEN	511, 512
AIWA	513
BELL+HOWELL	514
CGM	514, 515
DIGITAL	515
FISHER	514
G.E.	516
HITACHI	517, 518
JVC	519
MAGNAVOX	501, 515
MITSUBISHI	520, 521, 522, 523
PANASONIC	524
PHONOLA	515
SAMSUNG	525, 526
SANYO	514
SHARP	527, 528
SONY	529, 530, 531
TOSHIBA	532

DVD Setup codes

Maker	Setup codes
JVC	801
SONY	802
PIONEER	803
PANASONIC	804
KENWOOD	805, 808
TOSHIBA	806
PHILIPS	807

DVD player operations (For KRF-V5050D)

The remote control of this unit can control two groups of KENWOOD DVD players directly without using the remote control supplied with the DVD player.

- Group-1: DV-4900, DV-4070B, DV-2070, DV-203, DVF-9010, DVF-K7010, DVF-5010, DVF-R9030, DVF-R7030, DVF-3530 and DV-402
- Group-2: DV-4050, DV-303, DVF-R6030, DVF-K5020, DVF-5020, DVF-3020 and DVF-3030

Depending on your KENWOOD DVD model, you need to set up your receiver remote control as follows:

To set for Group-1 DVD players:

Press the numeric "1" key while pressing the "POWER" key (not the DVD Power key) on your remote control.

To set for Group-2 DVD players:

Press the numeric "2" key while pressing the "POWER" key (not the DVD Power key) on your remote control.


- If your DVD player is not listed in the list above, perform the set up for either Group-1 or Group-2. When the set up is successful, then your DVD player falls into that particular group.

How to operate the DVD player with the remote control

1. Pressing the DVD Power key for more than 2 seconds turns the DVD player on or off.
2. To carry out the functions of the DVD player, first press the DVD Power key, then press each key for each operation as explained in the DVD operation pages in the operating instructions. In this case, the DVD operation mode is retained for 15 seconds after pressing any of those DVD operation buttons.
(To turn the receiver operation mode within 15 seconds, press the RECEIVER key.)

DVD player operation keys


You can perform these basic operations using the keys described below when connected to KENWOOD DVD player.

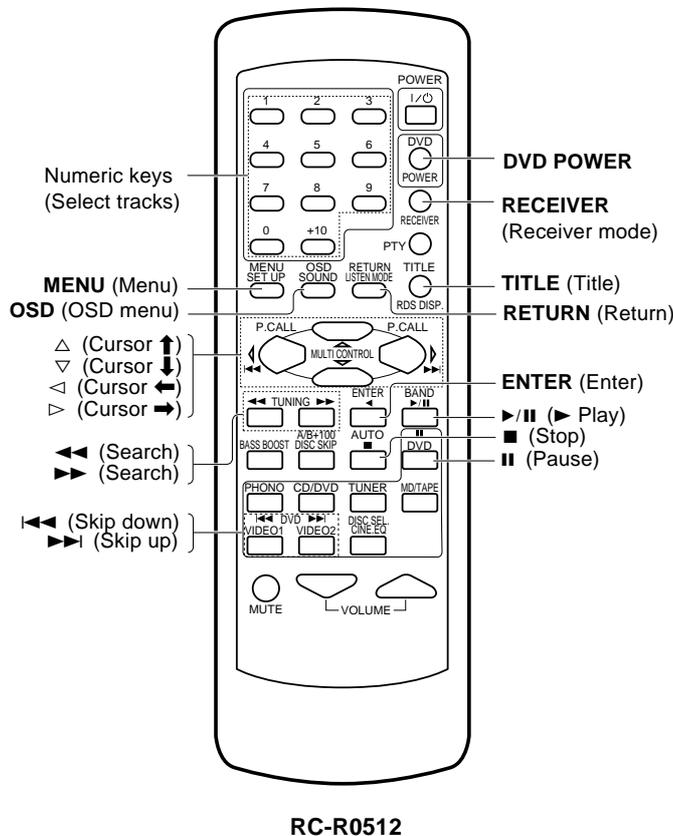


CASSETTE deck, CD player & MD recorder operations (For KRF-V5050D)

You can perform these basic operations using the keys described below when connected to KENWOOD cassette deck, MD recorder or CD player equipped with system control operations. - 15


Cassette deck operations

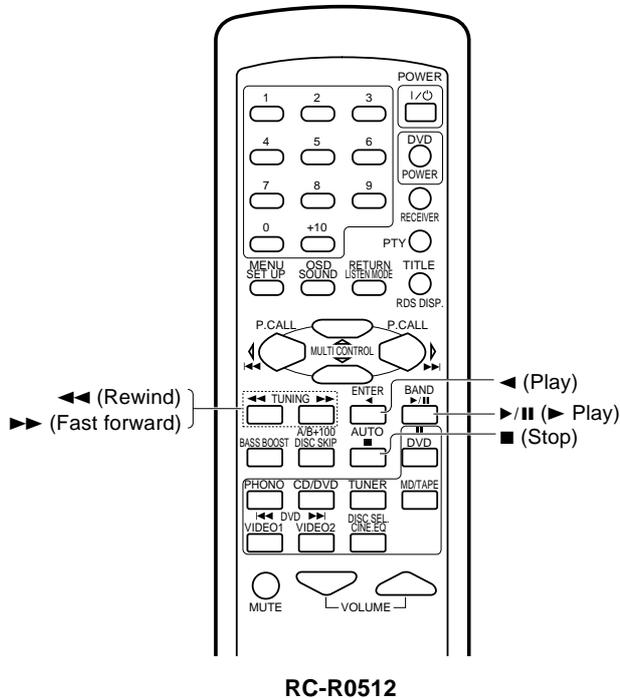

CD player operations

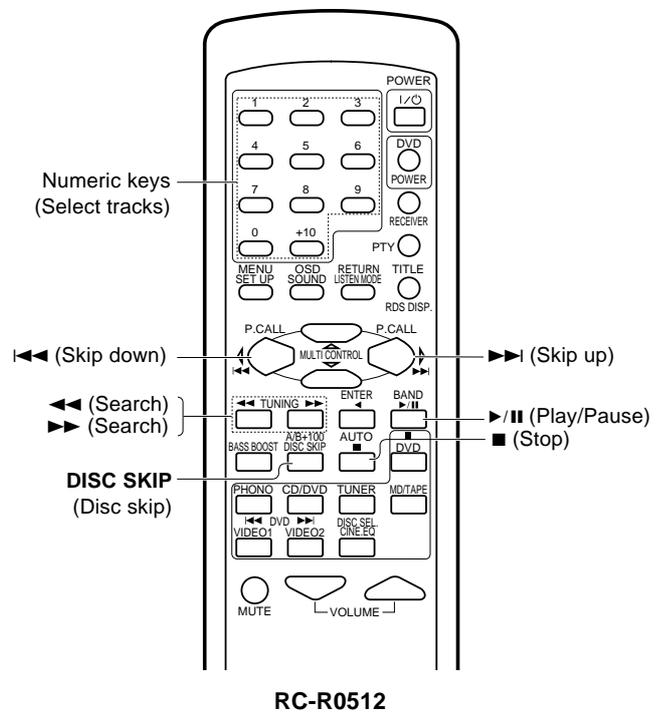

MD recorder operations

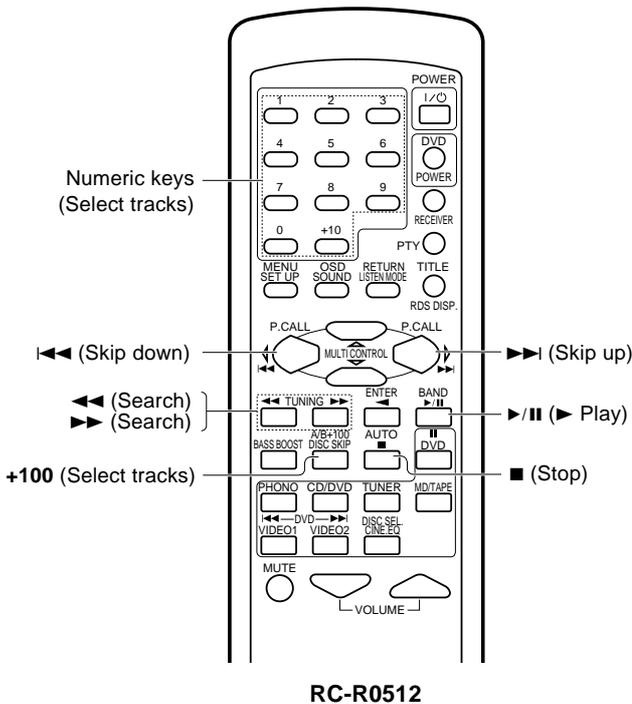


Notes

1. Certain codes may only operate some of the function available on a given model.
2. The charts above show the typical functions available for each component. Some manufacturers use different key combinations to perform similar functions. For that reason, we have programmed extra functions on some of the unused number keys to help you control your equipment.


CASSETTE deck, CD player & MD recorder operations (For KRF-V6050D)

You can perform these basic operations using the keys described below when connected to KENWOOD cassette deck, MD recorder or CD player equipped with system control operations. - 15


Cassette deck operations

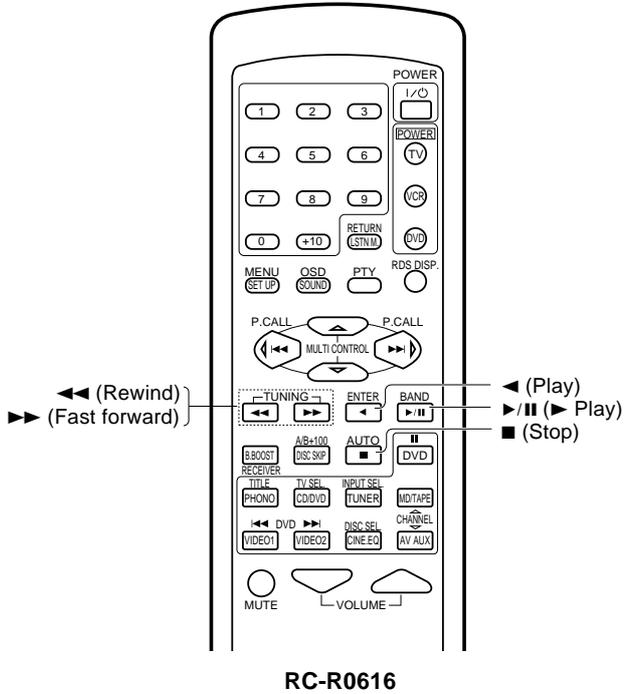

CD player operations

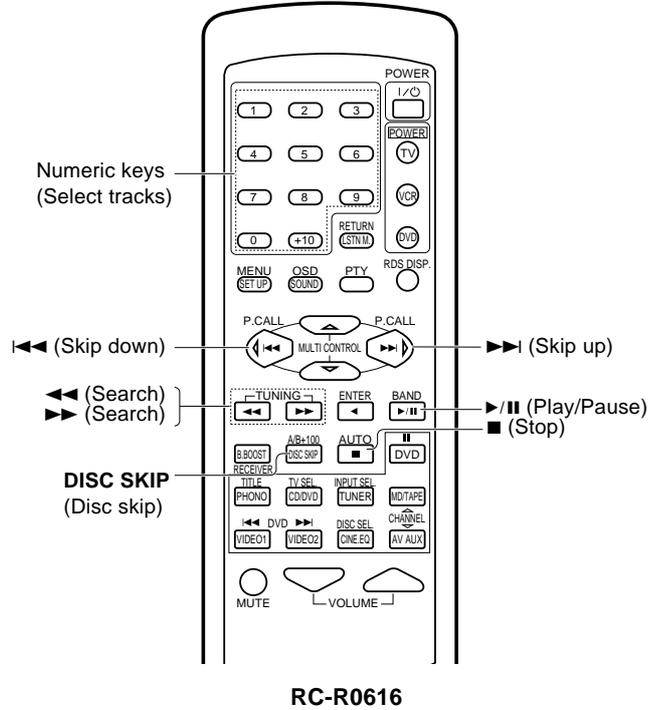

MD recorder operations

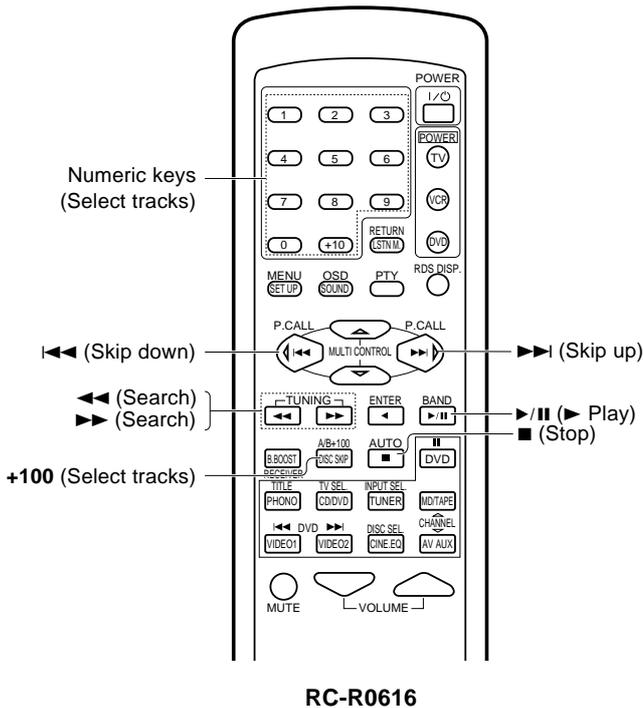

Other components' operations (For KRF-V6050D)

Refer to the following for the type of remote control operations available for each component.


- ❶ Select the input source.
- ❷ Press the keys corresponding to the operations you desire. Refer to the following sections for details.

- When pressing keys in succession, press each key firmly and be sure to wait at least 1 second before pressing the next key.
- Numeric keys function the same as the numeric keys on the original remote.


These keys can be used to perform the basic operations of KENWOOD and other makers' components which the setup code for each component had been entered beforehand.

— 33 —


TV operations

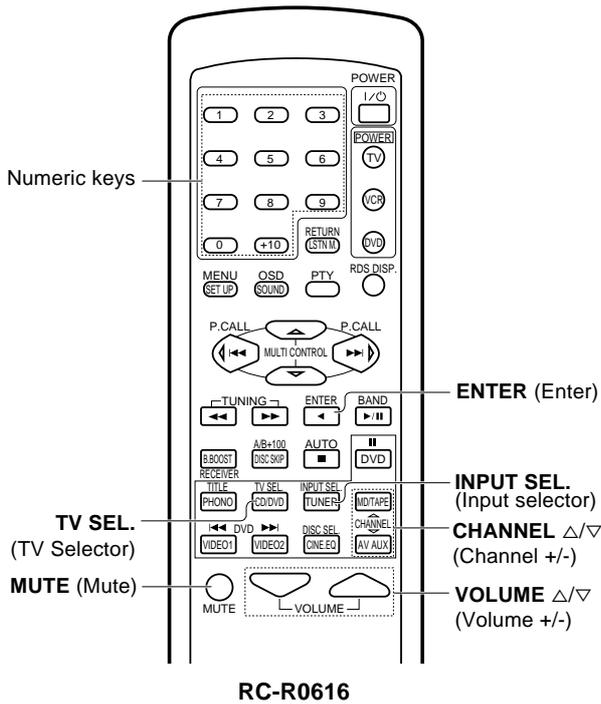

VCR operations

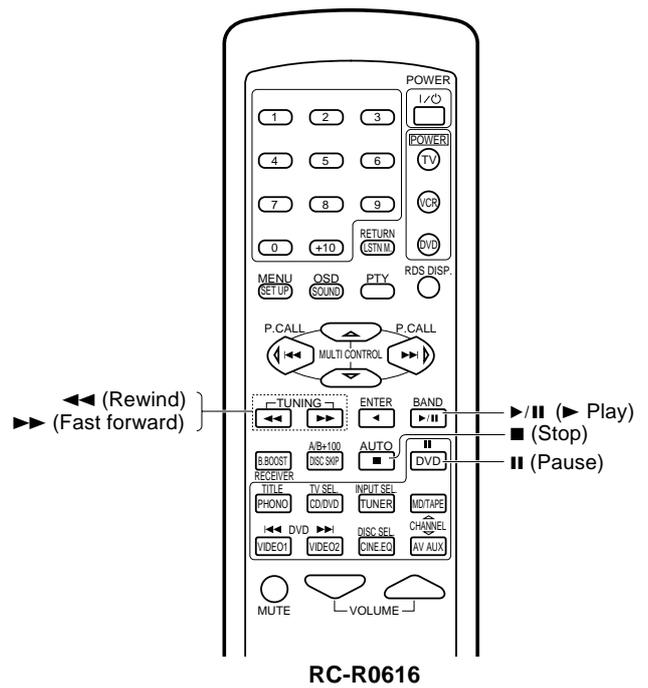

DVD player operations

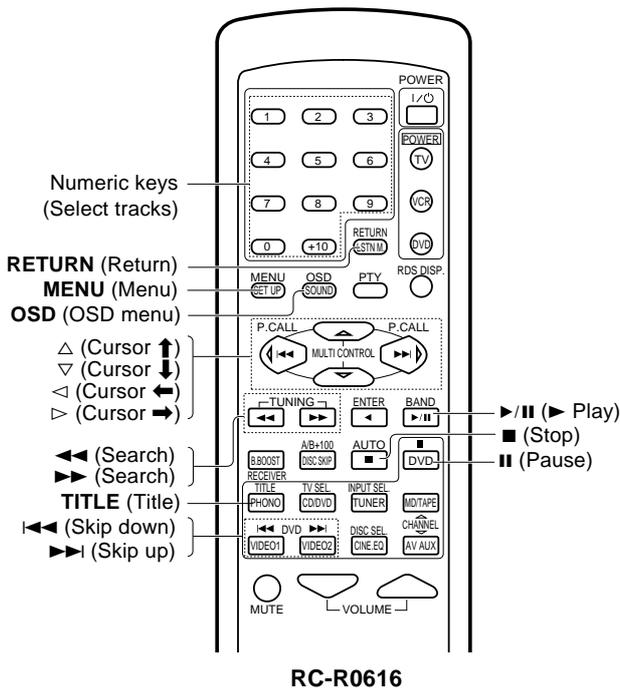

In case of difficulty

38

Resetting the Microcomputer

The microcomputer may malfunction (unit cannot be operated, or shows an erroneous display) if the power cord is unplugged while the power is ON, or due to some other external factors. If this happens, execute the following procedure to reset the microcomputer and return the unit to its normal operating condition.

With the power cord plugged in, turn the POWER key OFF. Then, while holding down the ON/STANDBY key, press POWER key.

- Please note that resetting the microcomputer will clear the contents of the memory and returns the unit to the state it was in when it left the factory.

Amplifier

Symptom	Cause	Remedy
No sound from the speakers.	<ul style="list-style-type: none"> • The speaker cords are disconnected. • VOLUME is set to the minimum position. • MUTE is ON. • The SPEAKERS switches are set to OFF. 	<ul style="list-style-type: none"> • Connect them properly referring to “Connecting the speakers”  -15 • Adjust the volume to a proper level. • Turn OFF the MUTE.  -21 • Set the SPEAKERS switch(es) to ON.  -19
The standby indicator blinks and sound is not output.	<ul style="list-style-type: none"> • Speaker cords are short-circuited. 	<ul style="list-style-type: none"> • Turn the power off, eliminate the short-circuiting, then turn on the power again.
Sound is not output from one of the speakers.	<ul style="list-style-type: none"> • The speaker cord is disconnected. 	<ul style="list-style-type: none"> • Connect it properly referring to “Connecting the speakers”.  -15
Sound is not output from the surround speakers and / or the center speaker, or their sound is very small.	<ul style="list-style-type: none"> • The surround speaker cords and/or the center speaker cord is disconnected. • A surround mode has not been engaged. • The surround and/or center volume controls are set to the minimum level. 	<ul style="list-style-type: none"> • Connect it properly referring to “Connecting the speakers”.  -15 • Select a surround mode. • Adjust the speaker levels using the test tone.  -18
A humming noise is generated when the PHONO input selector is selected.	<ul style="list-style-type: none"> • The audio cord from the turntable is not connected to the PHONO jacks. • The turntable is not grounded. 	<ul style="list-style-type: none"> • Insert the audio cord plugs securely into the PHONO jacks. • Connect the grounding wire to the GND terminal on the rear panel.
When playing a Dolby Digital source signal using a DVD player, the sound is cut off soon after it starts.	<ul style="list-style-type: none"> • There are many possible causes for this problem, depending on the type of DVD player used. 	<ul style="list-style-type: none"> • Set the input mode to digital manual before starting playback of the Dolby Digital source.  -8
No sound is produced during playback from a DVD player.	<ul style="list-style-type: none"> • The input mode is set to digital manual. 	<ul style="list-style-type: none"> • Press the INPUT MODE key to select to digital auto mode.  -8
A video source cannot be recorded normally.	<ul style="list-style-type: none"> • The software is copy-guarded. 	<ul style="list-style-type: none"> • Copy-guarded video software cannot be recorded.

Tuner

Symptom	Cause	Remedy
Radio stations cannot be received.	<ul style="list-style-type: none"> • No antenna is connected. • The broadcast band is not set properly. • The frequency of the desired station is not tuned. 	<ul style="list-style-type: none"> • Connect an antenna.  -13 • Set the broadcast band properly. • Tune the frequency of the desired station.  -23
Interference.	<ul style="list-style-type: none"> • Noise due to ignition noise from an automobile. • Noise due to interference from an electric appliance. • Noise due to a nearby TV set. 	<ul style="list-style-type: none"> • Install the outdoor antenna away from the road. • Turn off the power to the appliance. • Install the receiver farther away from the TV.
A station which was preset cannot be received by pressing the corresponding numeric key.	<ul style="list-style-type: none"> • The preset station belongs to a frequency that cannot be received. • The preset memory was cleared because the power cord had been unplugged for a long period of time. 	<ul style="list-style-type: none"> • Preset a station with a receivable frequency. • Preset the station again.

Remote control unit

Symptom	Cause	Remedy
<p>Certain inputs cannot be selected using the remote control.</p>	<ul style="list-style-type: none"> • No setup codes registered at for the respective input(s). 	<ul style="list-style-type: none"> • Register a setup code at the respective input(s). → [33]
<p>Remote control operation is not possible.</p>	<ul style="list-style-type: none"> • The remote control is set to a different operation mode. • Batteries are exhausted. • The remote control unit is too far away from the main system, controlling angle is too large, or there is an obstacle between the receiver and the remote. • The audio cords and system control cords are not connected properly. • No software is loaded in the source component. • An attempt is made to play a tape which is being recorded in the cassette deck. • The remote control has not been set to the operation mode for the component you wish to control. • The microprocessor of the remote control mal-functions. 	<ul style="list-style-type: none"> • Press the source select keys or source POWER keys to select the appropriate operation mode. • Replace with new batteries. • Operate the remote control unit within the controllable range. • Connect properly referring to "Setting up the system". • Place software in the source component you want to play. • Wait until recording has completed. • Press the source select keys or source POWER keys to activate the operation mode for the component you want to control before operation. → [32] • Reset the microprocessor.

AUDIO section (KRF-V6050D)

Rated power output during STEREO operation	
DIN/IEC (DIN 1kHz, 0.7% T.H.D., at 6 Ω)	110 W + 110 W
Effective power output during SURROUND operation	
FRONT (1kHz, 0.7% T.H.D. at 6 Ω, one channel driven)	100 W + 100 W
CENTER (1kHz, 0.7% T.H.D. at 6 Ω, one channel driven)	100 W
SURROUND (1kHz, 0.7% T.H.D. at 6 Ω, one channel driven)	100 W + 100 W
Total harmonic distortion	0.050% (1 kHz, 50W, 6 Ω)
Frequency response (IHF '66)	
CD	10 Hz ~ 60 kHz, +0 dB, -3.0 dB
Signal to noise ratio (IHF'66)	
PHONO (MM)	74 dB
CD	90 dB
Input sensitivity / impedance	
PHONO (MM)	2.5 mV / 27 kΩ
CD	200 mV / 47 kΩ
VIDEO2/MONITOR	200 mV / 47 kΩ
DVD/6ch INPUT	200 mV / 10 kΩ
Output level / impedance	
TAPE REC	200 mV / 1 kΩ
MONITOR OUT (VIDEO2/MONITOR)	200 mV / 1 kΩ
PRE OUT (SUBWOOFER)	1.5 V / 2.2 kΩ
Tone control	
BASS	±10 dB (at 70 Hz)
TREBLE	±10 dB (at 10 kHz)

AUDIO section (KRF-V5050D)

Rated power output during STEREO operation	
DIN/IEC (DIN 1 kHz, 0.7% T.H.D., 6 Ω)	110 W + 110 W
Effective power output during SURROUND operation	
FRONT (1kHz, 0.7% T.H.D. at 6 Ω, one channel driven)	100 W + 100 W
CENTER (1kHz, 0.7% T.H.D. at 6 Ω, one channel driven)	100 W
SURROUND (1kHz, 0.7% T.H.D. at 6 Ω, one channel driven)	100 W + 100 W
Total harmonic distortion	0.050% (1 kHz, 50W, 6 Ω)
Frequency response (IHF '66)	
CD	40 Hz ~ 60 kHz, +0 dB, -3.0 dB
Signal to noise ratio (IHF'66)	
PHONO (MM)	74 dB
CD	90 dB
Input sensitivity / impedance	
PHONO (MM)	2.5 mV / 27 kΩ
CD	200 mV / 47 kΩ
MONITOR IN (VIDEO2/MONITOR)	200 mV / 47 kΩ
DVD/6ch INPUT	200 mV / 47 kΩ
Output level / impedance	
TAPE REC	200 mV / 1 kΩ
MONITOR OUT (VIDEO2/MONITOR)	200 mV / 1 kΩ
PRE OUT (SUBWOOFER)	1.5 V / 2.2 kΩ
Tone control	
BASS	±10 dB (at 70 Hz)
TREBLE	±10 dB (at 10 kHz)

DIGITAL AUDIO section

Sampling frequency	32 kHz, 44.1 kHz, 48 kHz, 96kHz
Input level / impedance / wave length	
Optical	(-15 dBm ~ -21 dBm), 660 nm ±30nm
Coaxial	0.5 Vp-p / 75 Ω

VIDEO section

VIDEO inputs / outputs	
VIDEO (composite)	1 Vp-p / 75 Ω
S-VIDEO inputs / outputs (KRF-V6050D)	
S-VIDEO (Y-signal)	1 Vp-p / 75 Ω
(C-signal)	0.286 Vp-p / 75 Ω

FM tuner section

Tuning frequency range	87.5 MHz ~ 108 MHz
Usable sensitivity (DIN at 75 Ω)	
MONO	1.3 μV/13.2 dBf (40 kHz dev. S/N 26 dB)
STEREO	45 μV/42.1 dBf (46 kHz dev. S/N 46 dB)
Total harmonic distortion (1 kHz)	
MONO	0.2% (71.2 dBf input)
STEREO	0.8% (71.2 dBf input)
Signal to noise ratio (DIN weighted)	
MONO	65 dB (40 kHz dev. 71.2 dBf input)
STEREO	60 dB (46 kHz dev. 71.2 dBf input)
Stereo separation (DIN 1 kHz)	36 dB
Selectivity (DIN ± 300 kHz)	64 dB
Frequency response	(30 Hz ~ 15kHz), +0.5 dB, -3.0 dB

AM tuner section

Tuning frequency range	531 kHz ~ 1,602 kHz
Usable sensitivity	16 μV / (600 μV/m)
Signal to noise ratio (30% mod. 1 mV input)	50 dB

GENERAL

Power consumption	250 W
AC outlet	
SWITCHED	(total 90 W max.)
Dimensions	W : 440 mm
	H : 143 mm
	D : 400 mm
Weight	
KRF-V6050D	8.6 kg
KRF-V5050D	8.5 kg

Notes

1. KENWOOD follows a policy of continuous advancements in development. For this reason specifications may be changed without notice.
2. The full performance may not be exhibited in an extremely cold location (under a water-freezing temperature).

KENWOOD

For your records

Record the serial number, found on the back of the unit, in the spaces designated on the warranty card, and in the space provided below. Refer to the model and serial numbers whenever you call upon your dealer for information or service on this product.

Model _____ Serial Number _____